Function and Operation

- Press the button to adjust the height of the armrest, loosen the button to stop the armrest on the current position.
 - neight 2. By turning the knob, the armrests can be adjusted outward to achieve different seat widths.
- 3. Pull the backrest upward to adjust the height of the backrest. The backrest will return to its initial position when pulled up to the highest position.









- 4. Pull the handle to adjust the height of the seat cushion. Pull the handle to adjust the back tilt.
- 5. Turn the knob to adjust the strength of the tilting according to the user's weight.



- 6. Lever for seat angle adjustment (-1.5 deg. to 2.5 deg.)
- 7. Lever for tilting / locking of seat at certain degree.
- 8. Pull the handle to adjust the height of the seat cushion.
- 9. Pull the handle to adjust tilting angle and lock the tilting mechanism.
- 10. Pull the handle to adjust the seat forward and backward.



ERGO TASK









Packing Size


ERGO TASK


Carton size: 32"L*12-3/4"W*26"H CBM:0.174 Net weight: 23.2 KG Gross weight: 26.4 KG Container Loading: 20GP: 170pcs; 40GP: 348pcs; 40HQ: 400pcs

Color Swatch





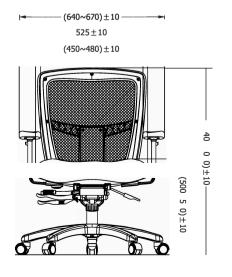

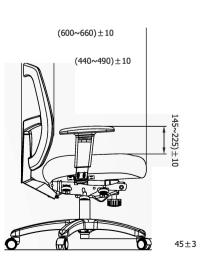



ERGO TASK