 
 


ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKCZ127

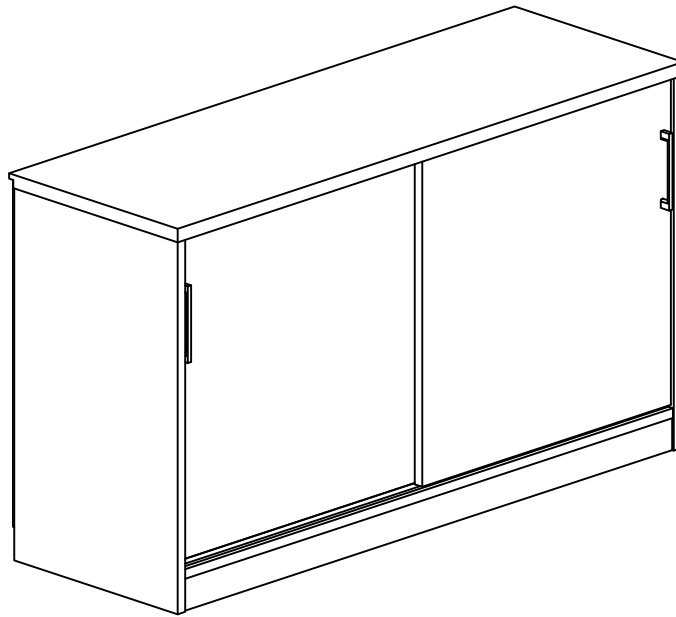 


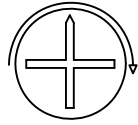

The turning direction of attaching



The arrow direction=front

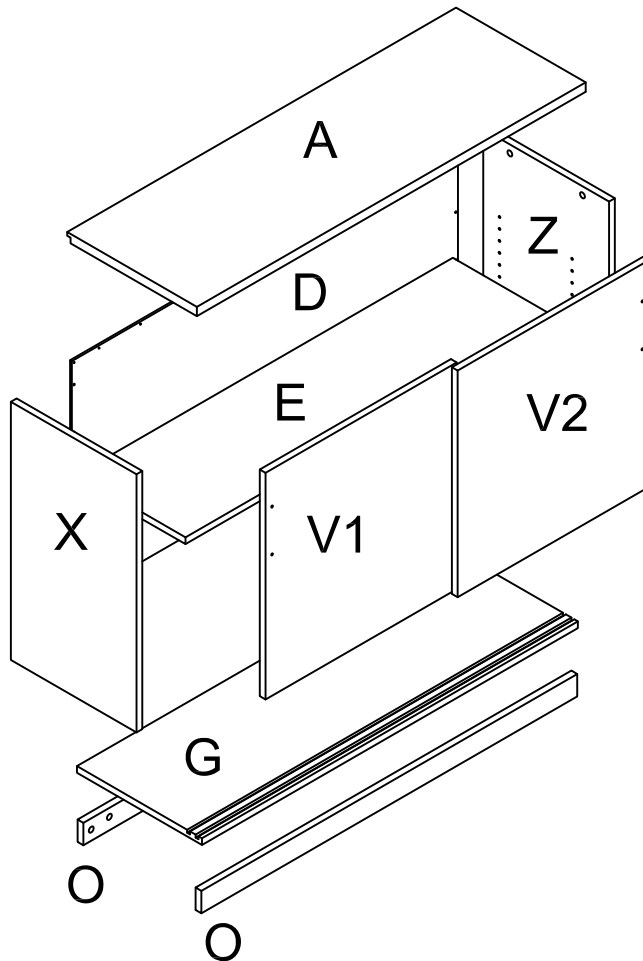

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	Ⓒ2	(5/8") Cam Cover	24
X	Left side panel	1	Ⓟ1	Threaded Dowel Pin	8
Z	Right side panel	1	Ⓢ1	3.5*14 Screw	38
D	Back panel	1	Ⓢ2	4*22 Fix Bolt	4
G	Bottom panel	1	ⓗ1	Handle	2
E	Moveable shelf	1			
O	Batten	2			
V1	Door panel	1			
V2	Door panel	1			



Ⓒ2 (5/8") Cam Cover-20



 
Ⓟ1 Threaded Dowel Pin-4



Ⓢ1 3.5*14 Screw-32




Ⓢ2 4*22 Fix Bolt-4




ⓗ1 Handle-2

 Pre-installed parts



Ⓒ5 Cam

 
STEP 1

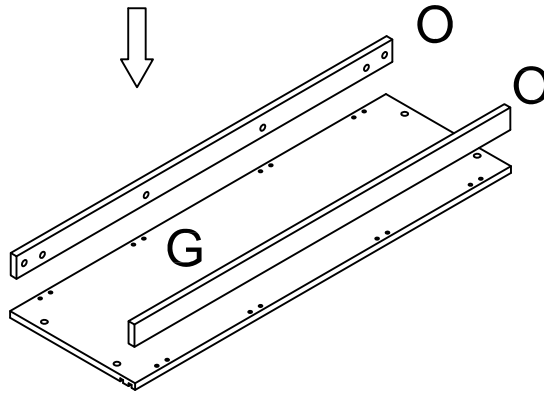

Preparation for Panels O and G.

1. Connect Cam bolts and dowels on panel O to the holes on panel G and tighten in a clockwise direction as illustrated above.

 
STEP 2

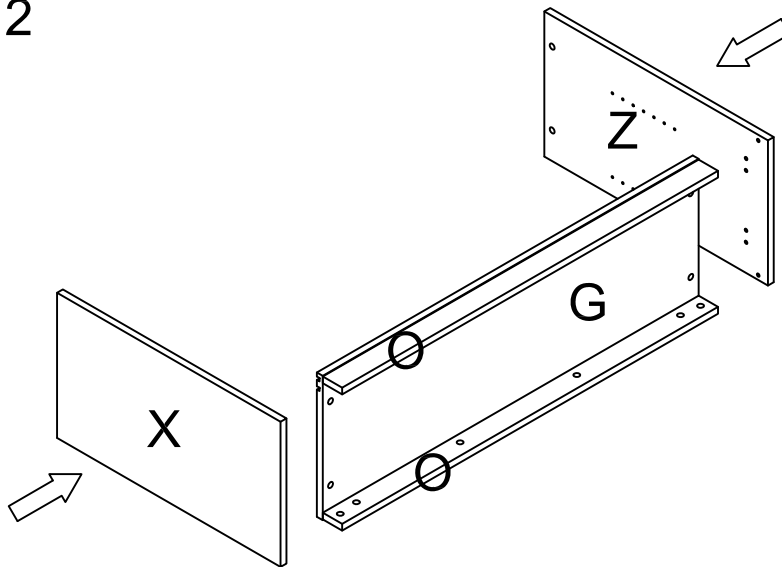

Preparation for Panels X and Z .

1. Connect Cam bolts and dowels on panel O and G to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.

 
STEP 3

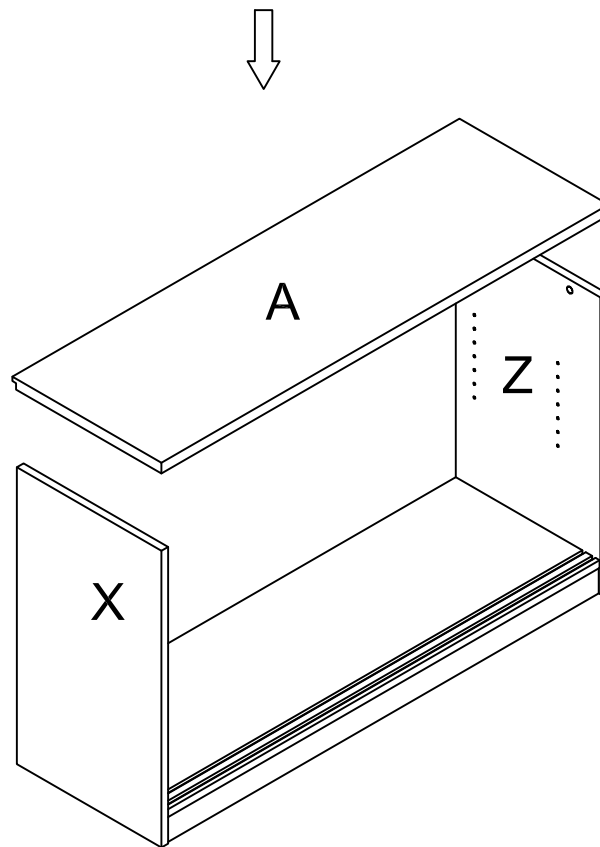

Preparation for Panels A.

1. Connect Cam bolts and dowels on panel X and Z to the holes on panel G and tighten in a clockwise direction as illustrated above.

 
STEP 4

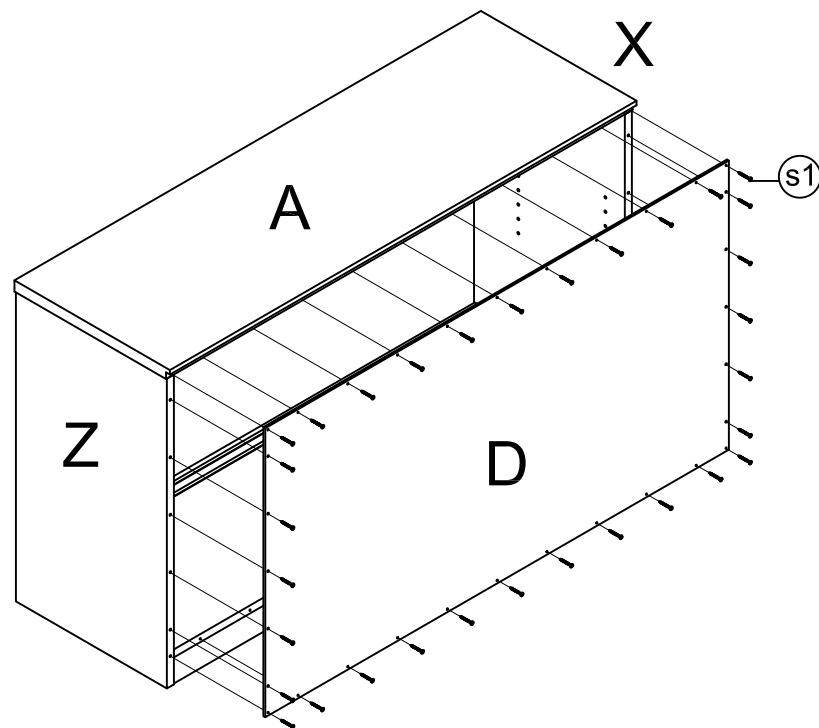

Preparation for Panels D.

1. Connect back panel D and panel X,Z,,G,A with screw (s1) as illustrated above.

 
STEP 5

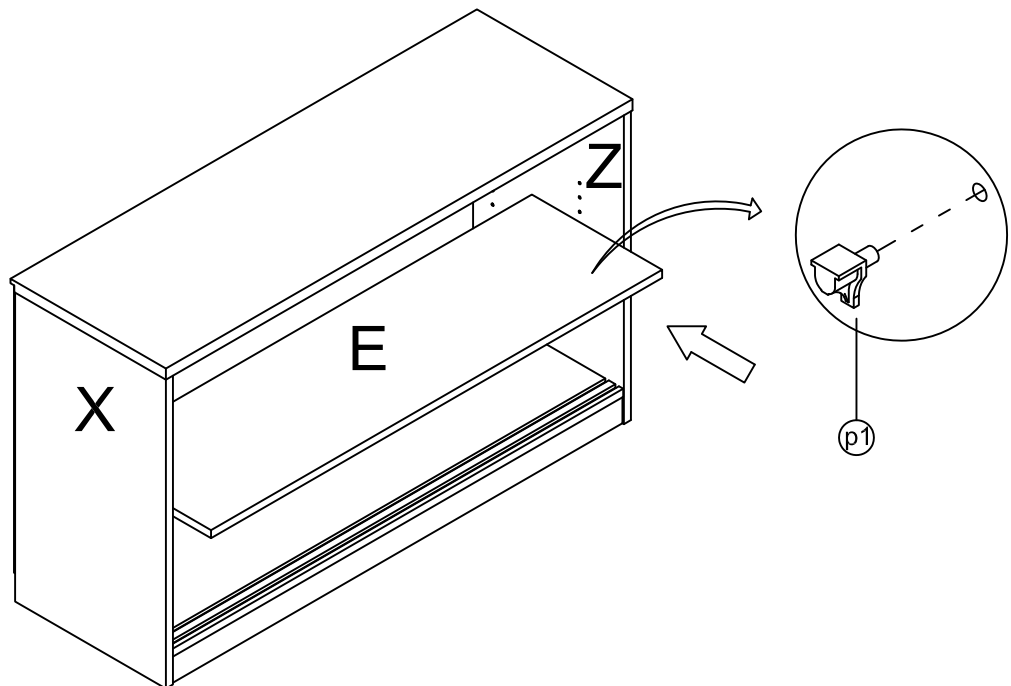

Moveable shelf E assembly.


1. Insert threaded dowel pins (p1) into panels X and Z as illustrated above.
2. Put the three panels E on the top of threaded dowel pins (p1) as illustrated above.

 STEP 6

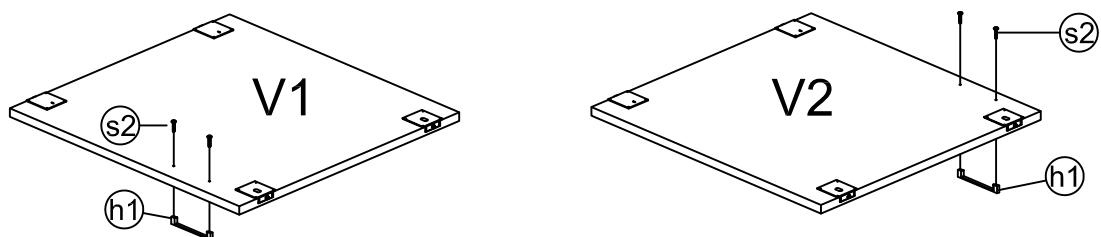

1. Fix handles (h1) to panels V1 and V2 with fix bolts (s2) as illustrated above.

 STEP 7

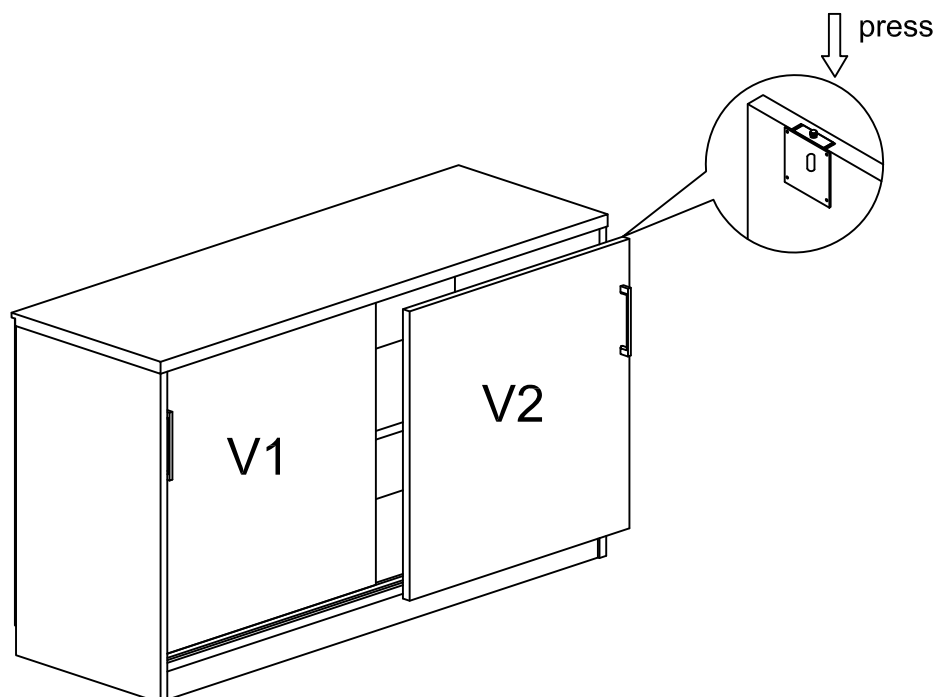

1. Credenza door V1 and V2 assembly.

You have now successfully completed the assembly on item:

Cupboard

ITEM NO. : OG-EKCZ127

