

# ERGO AIR PUMP ASSEMBLY INSTRUCTIONS





## **PARTS LIST**


KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	5	Caster	7	1 1	Backrest	13	1	M5 Size Allen Wrench
2	1	Base	8	1	Backrest Post	14	1	M6 Size Allen Wrench
3	1	Seat Post	9	1	Backrest Post Screw	15	1	Air Pump
4	1	Seat Post Cover (Optional)	10	6	Mechanism Screw	16	1	Air Pump Holder (optional)
5	1	Mechanism	11	1	Backr Tiçiht Bolt	TORQL	JE SETT	TINGS TO FIX ALL BOLTS: 1.6Nm
6	1	Seat	12	1	Backrest Bellow			

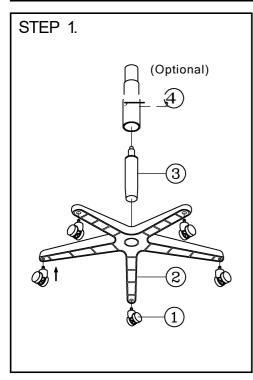


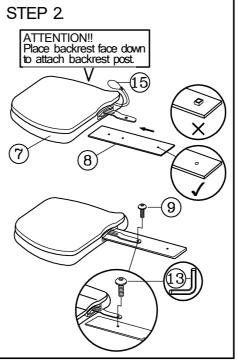

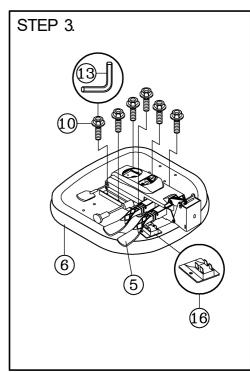

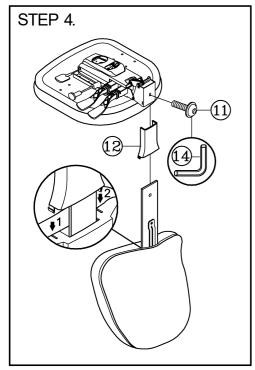

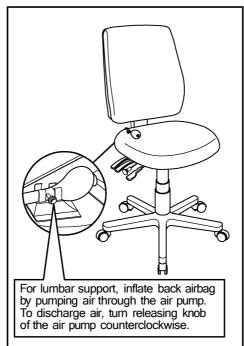

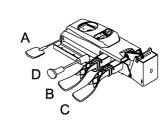

### **MECHANISM INSTRUCTIONS:**

- A Pneumatic seat height adjustment
- B Seat angle adjustment : Seat angle adjusts independently with a single lever.
- C Backrest angle adjustment : Back angle adjusts independently with a single lever.
- **D** Pull handle bar up , allows seat to slide forward and backward . Release handle bar to lock desired seat position.

#### **ATTENTION**

- 1. THIS ASSEMBLY INSTRUCTION IS ONLY FOR ASSEMBLING THE CHAIR THE CHAIR DRAWING MAY BE DIFFERENT FROM CHAIR APPEARANCE.

  2 SOME SCREWS MAY PREASSEMBLED, ASSEMBLERS CAN IGNORE THE STEP.
- 3. REMOVE ALL ITEMS FROM THE CARTON. VERIFY ALL PIECES BEFORE ASSEMBLY.

- PREVENTIVE MAINTENANCE AND WARNING!

  F ANY PARTS ARE MISSING, BROKEN, DAWAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.

  DISPOSE OF PACKAGING PROPERLY.

  FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

  EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE SILLLY TIGHTENED TO ENSURE STARM ITY.

- ARE FULLY TIGHTENED TO ENSURE STABILITY.