



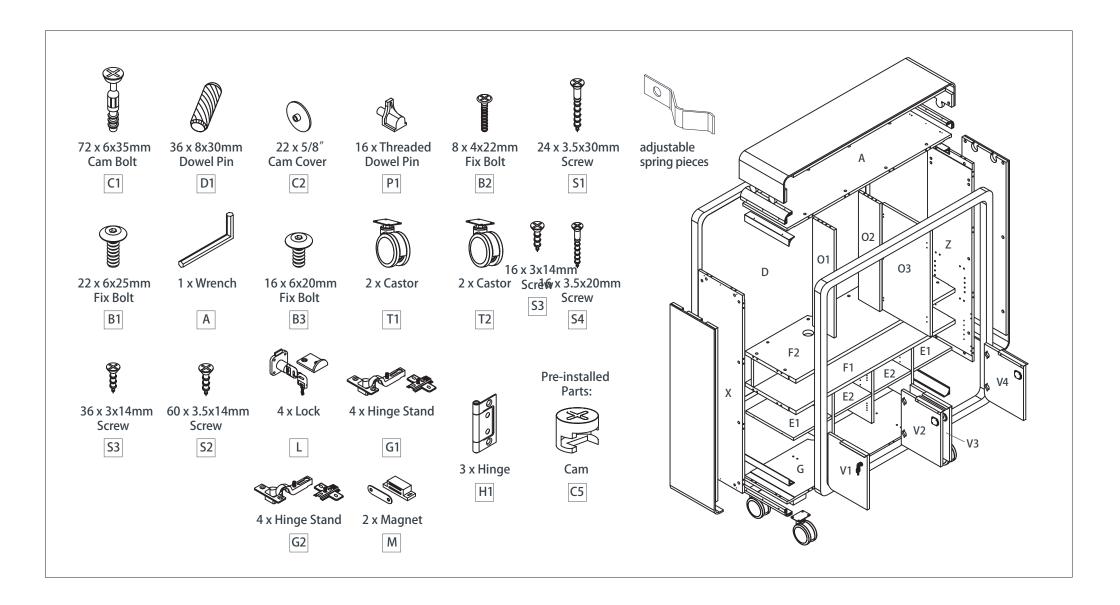


Components List



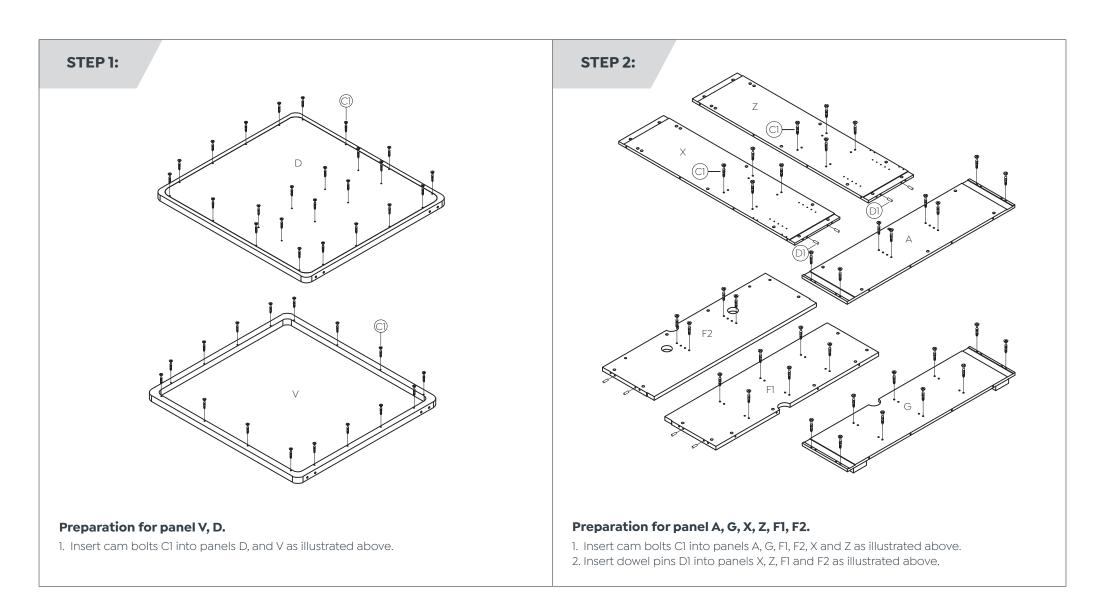


Assembly Instructions

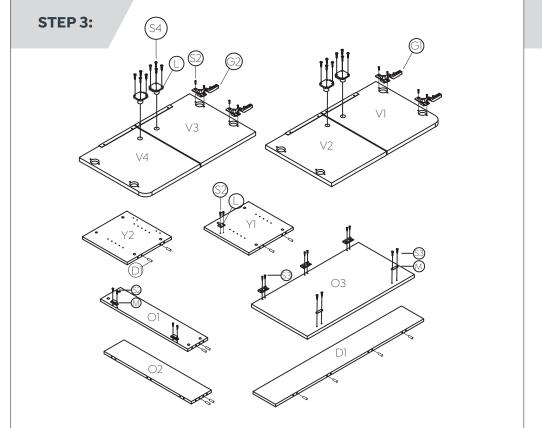


Preparation for panel V1, V2, V3, V4, Y1, Y2, D1, O1, O2, O3.

- 1. Insert dowel pins D1 into panels Y1, Y2, O1, O2 and D1 as illustrated above.
- 2. Insert cylinder of lock L through hole in Y1 and secure with S2 screws.
- 3. Insert lock L through hole in V1, V2, V3, V4 and secure with S4 screws.
- 4. Fix Hinge stand G1 into V1, V4 and G2 into V2, V3 secure with S2 screws.
- 5. Fix Hinge H1 into O3 and Magnet M into O3 secure with S3 screws.
- 6. Fix Magnet M into Ol secure with S2 screws.

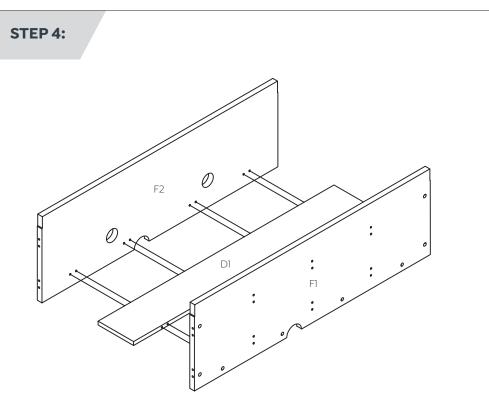


Panel F1, F2, D1 assembly.

1. Insert cam bolts C2 and dowel pins D1 on panel D1 into cams on panel F1, F2 and tighten in a clockwise direction as illustrated above.

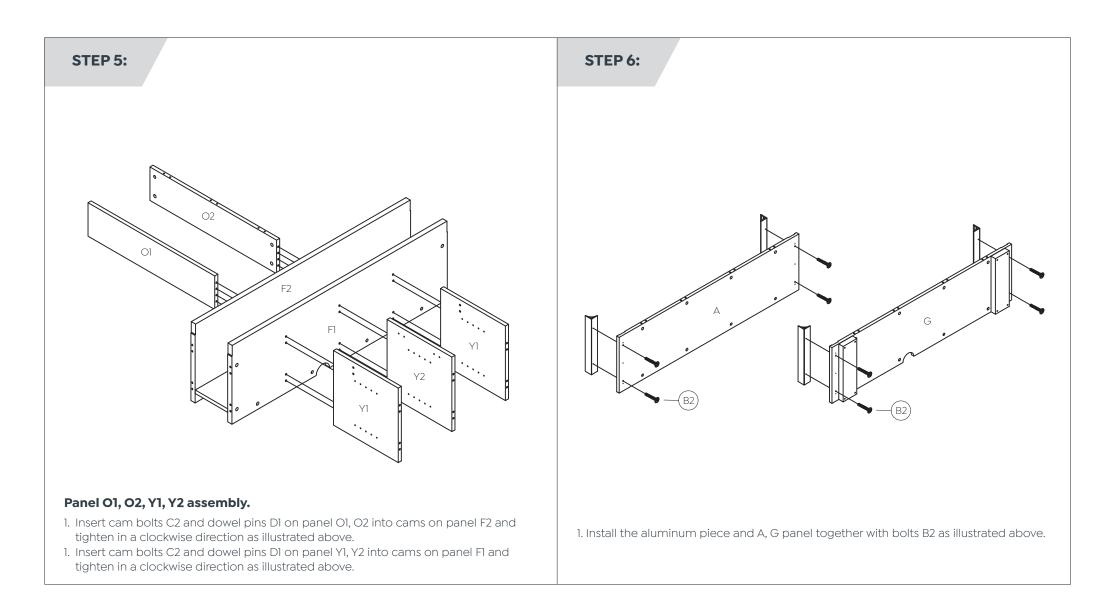

Assembly Instructions

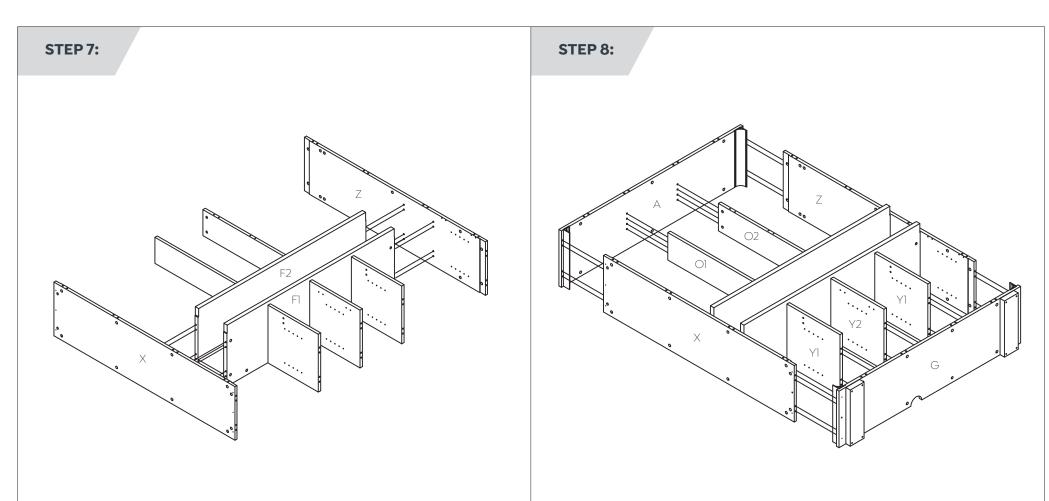



Panel X, Z assembly.


1. Insert cam bolts C2 and dowel pins D1 on panel X, Z into cams on panel F1, F2 and tighten in a clockwise direction as illustrated above.


Panel A/G assembly.

1. Insert cam bolts C1 and dowel pins D1 on panel A, G into cams on panel X, Z, O or Y and tighten in a clockwise direction as illustrated above.

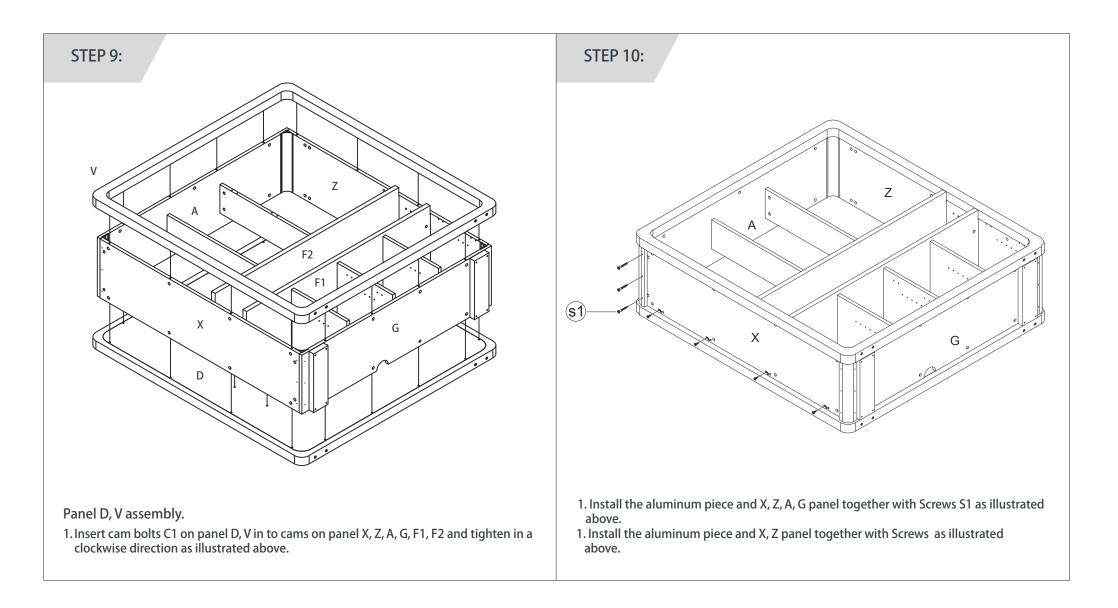

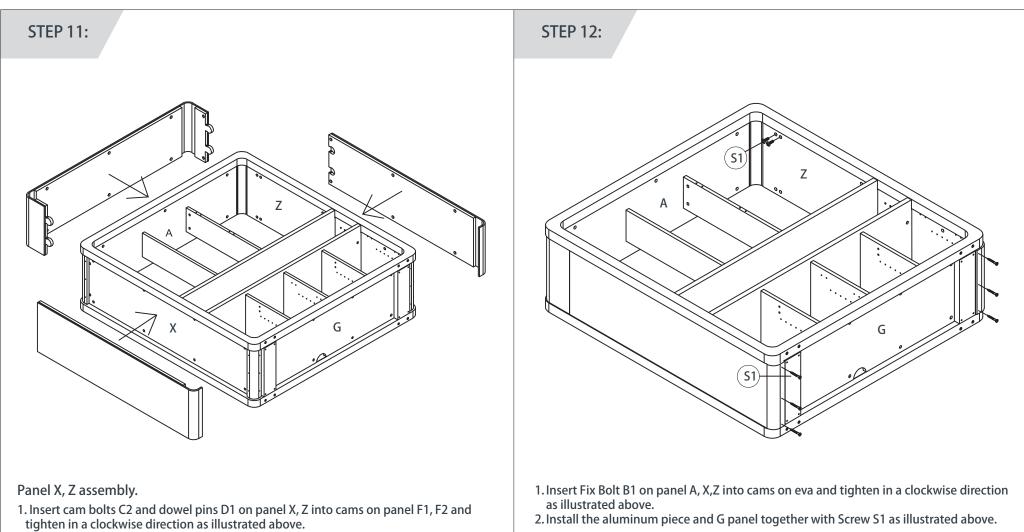

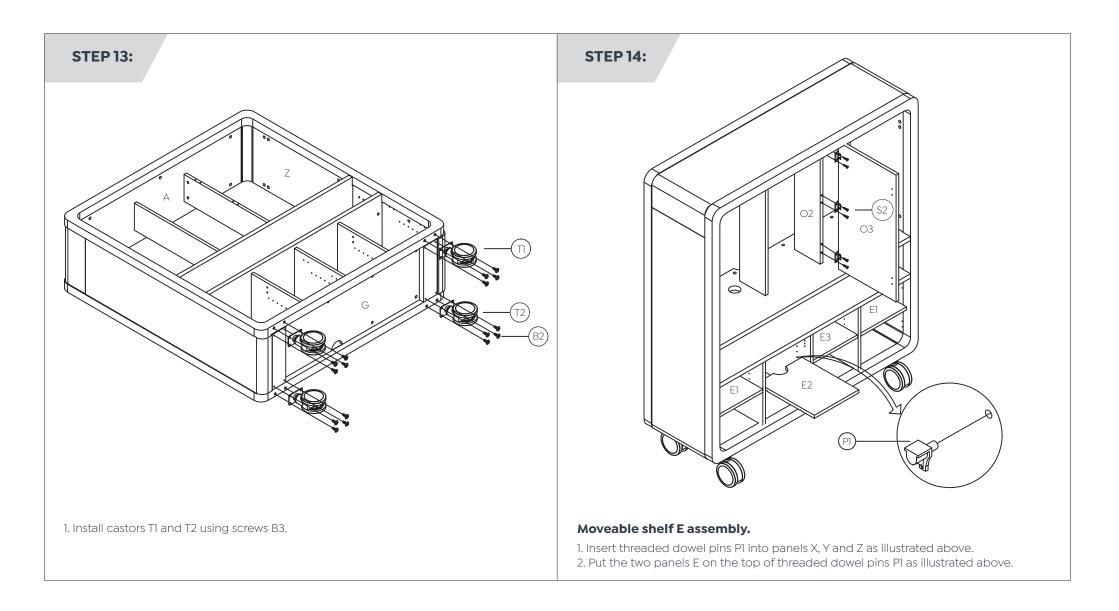


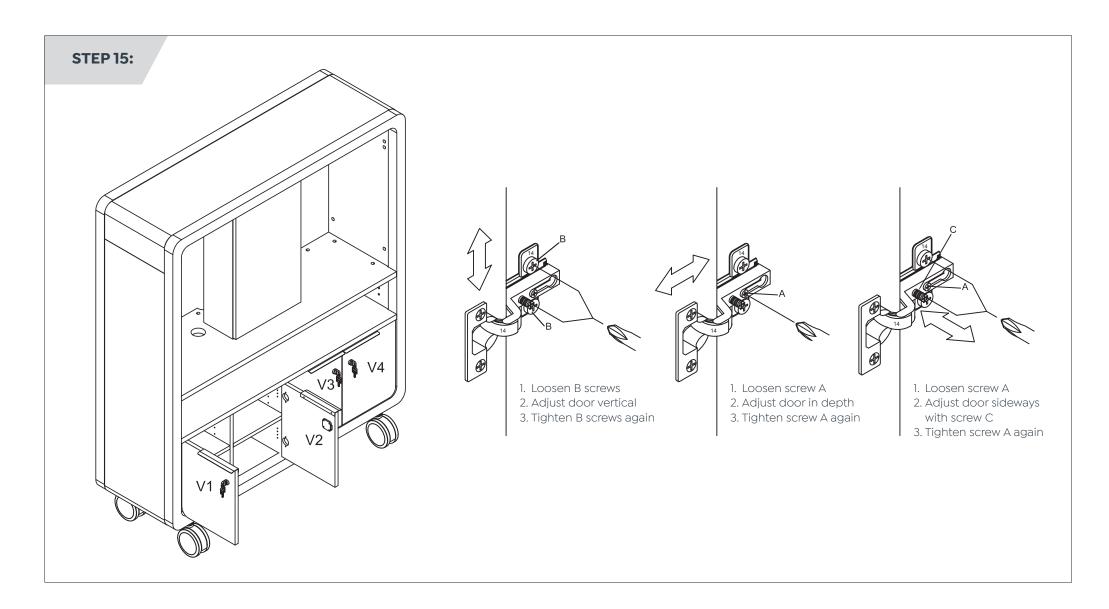




TV Bracket

Components List

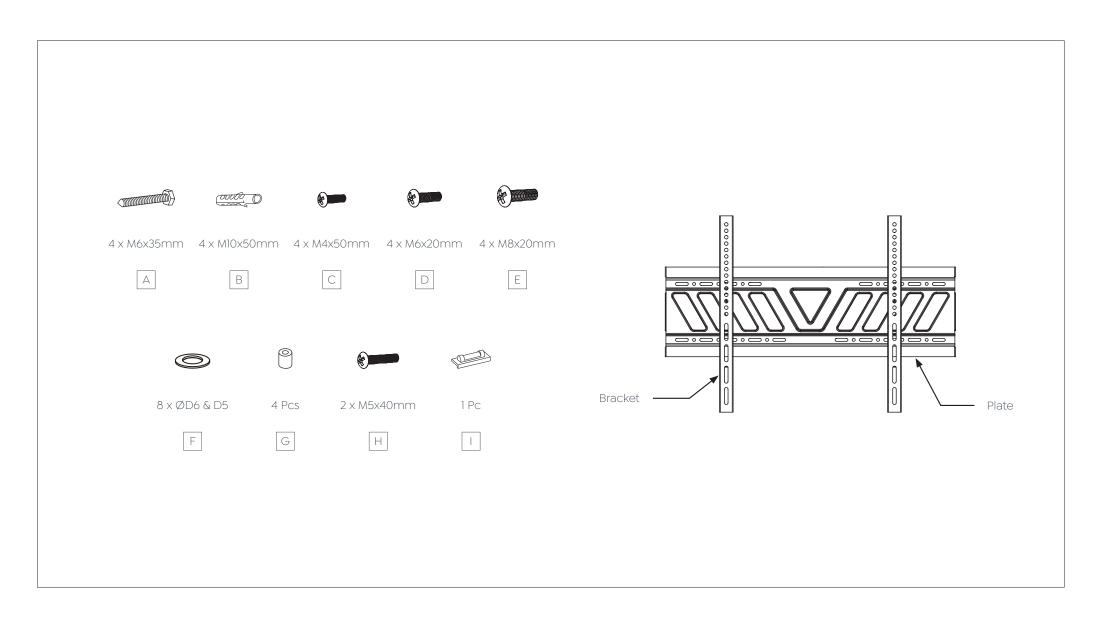

TV Bracket

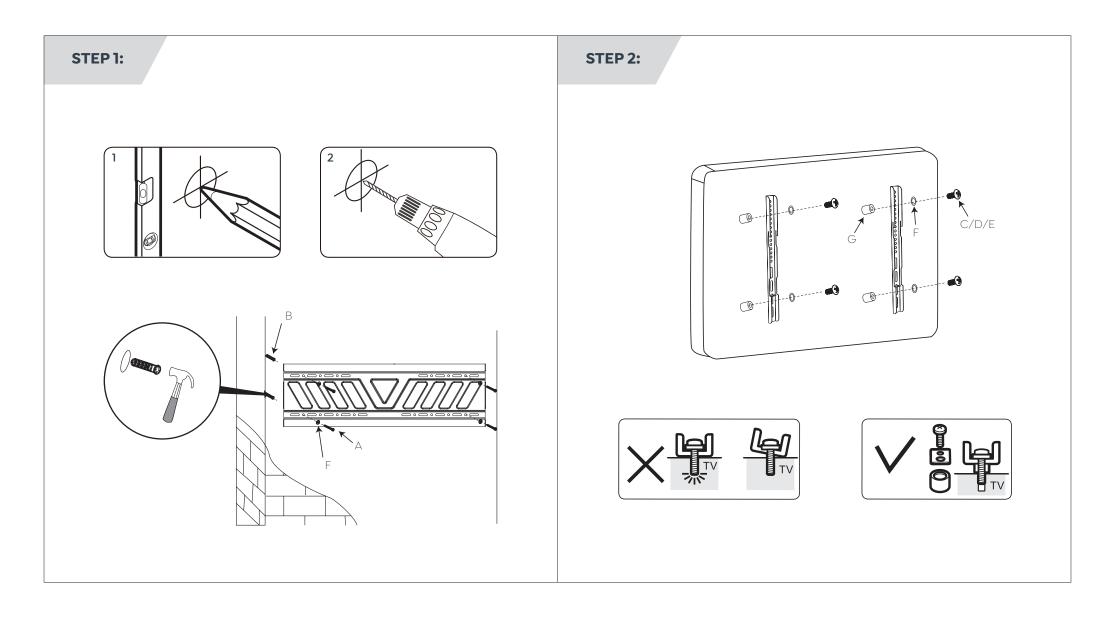

TV Bracket

