

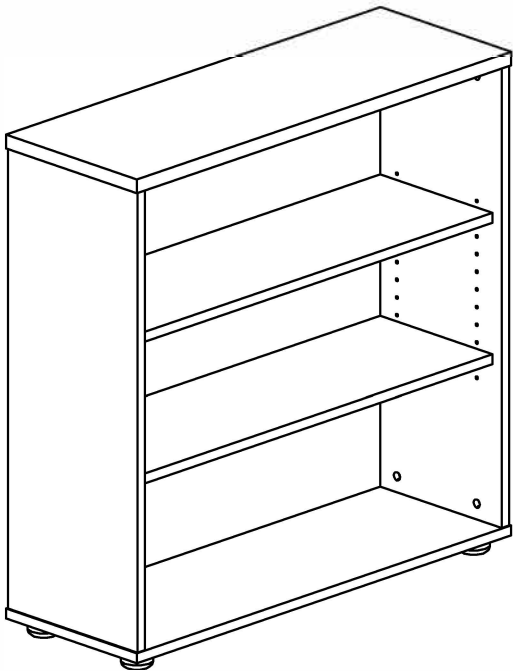
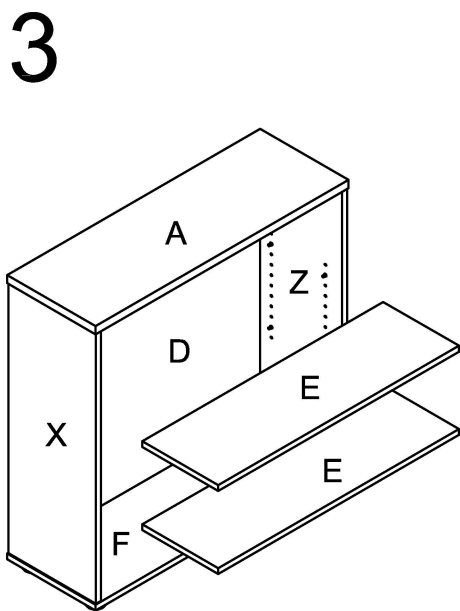
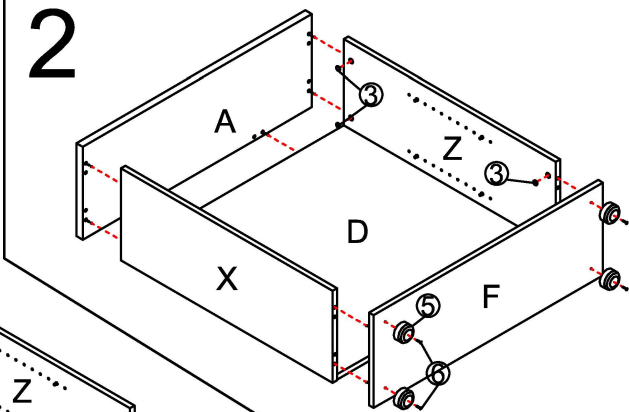
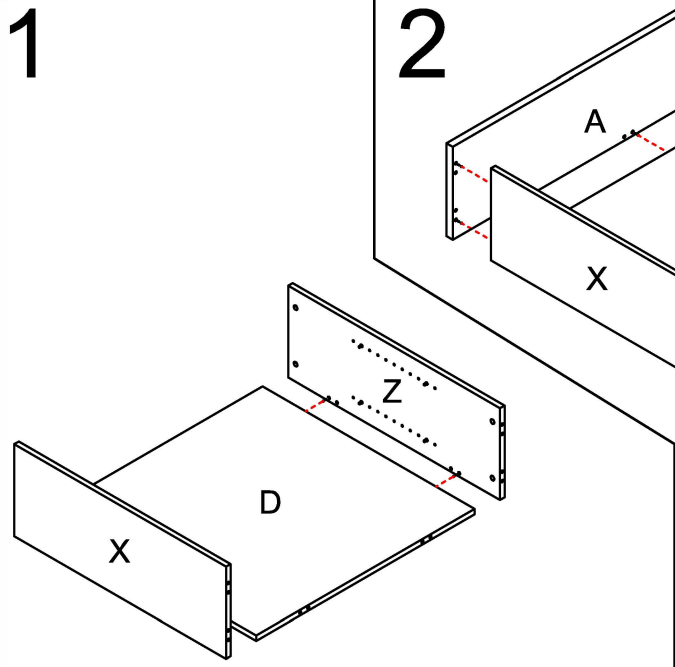


ASSEMBLY INSTRUCTIONS

CBC9

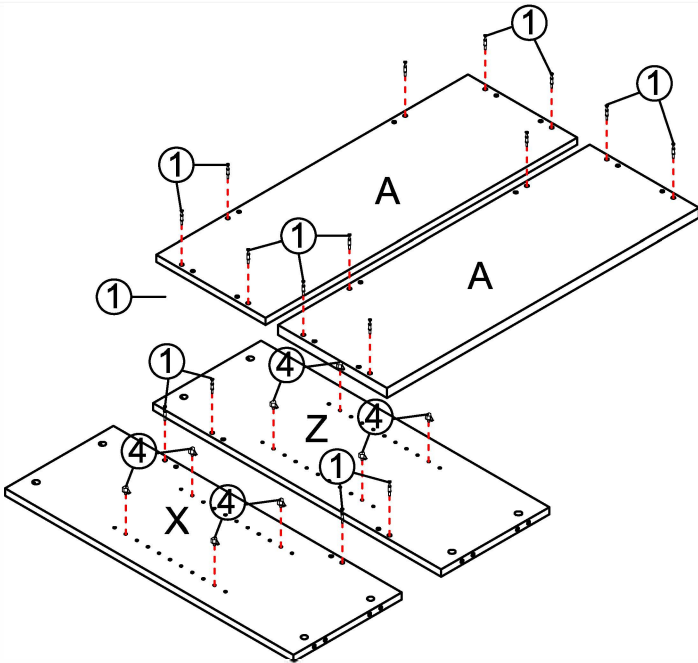


pin	6x35	
	1	16PCS
CAM		
	2	16PCS
Cam Cover		
	3	16PCS
Cam Nut		
	4	8PCS
CASTER	25Hx 62	
	5	4PCS
Screw	4x30	
	6	4PCS

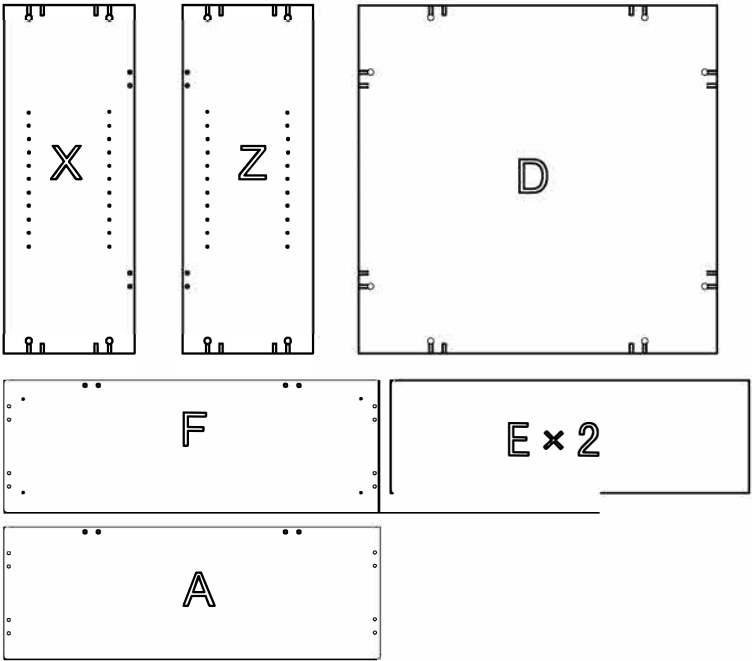






ASSEMBLY INSTRUCTIONS

CBC12

CBC15

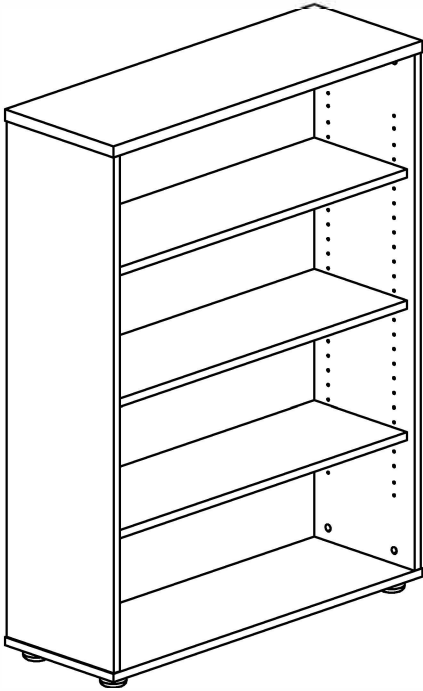


pin	6×35
1	20PCS
CAM	
2	20PCS
Cam Cover	
3	20PCS
Bolt Minifix	
4	12PCS
CUSHIOA	25H×φ52
5	4PCS
Screw	4×30
6	4PCS

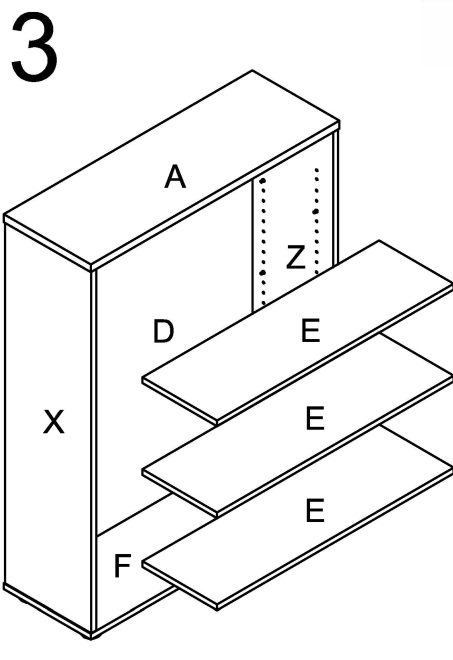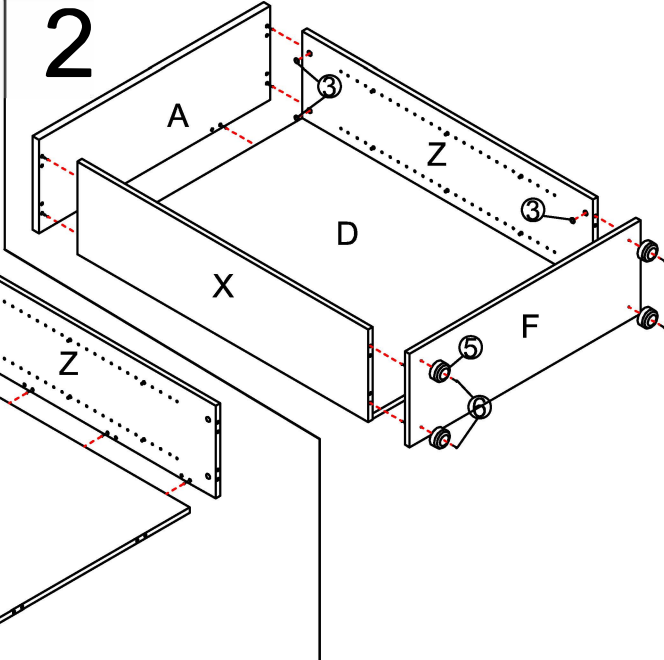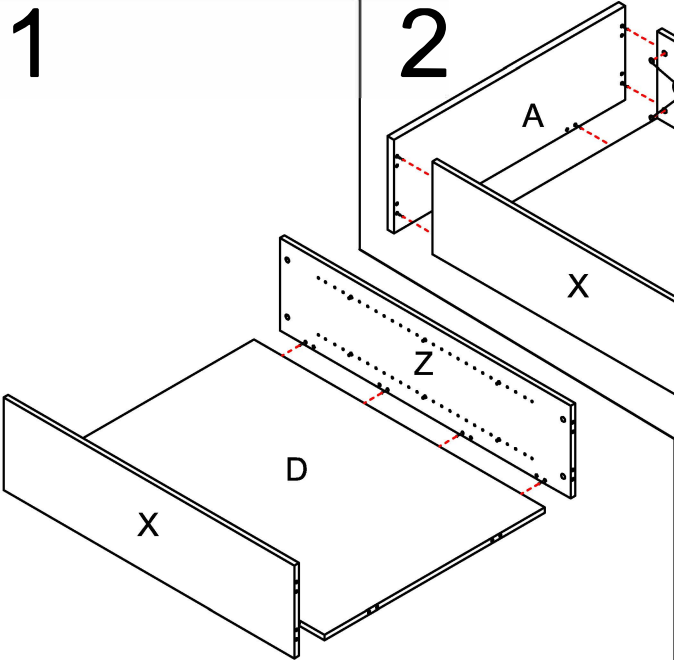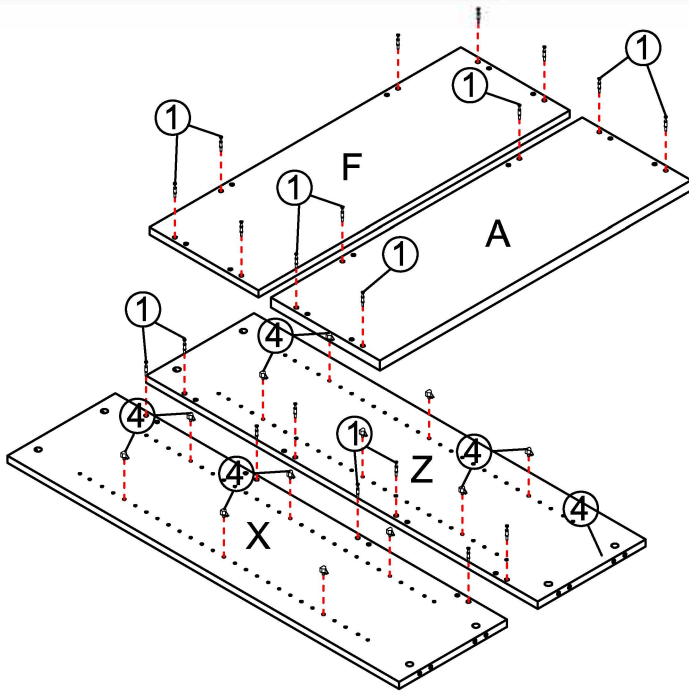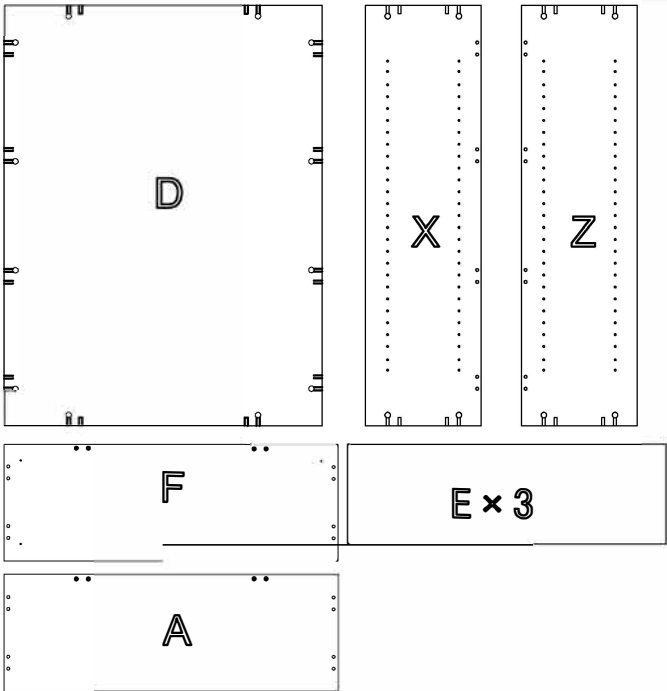

ASSEMBLY INSTRUCTIONS

CBC18

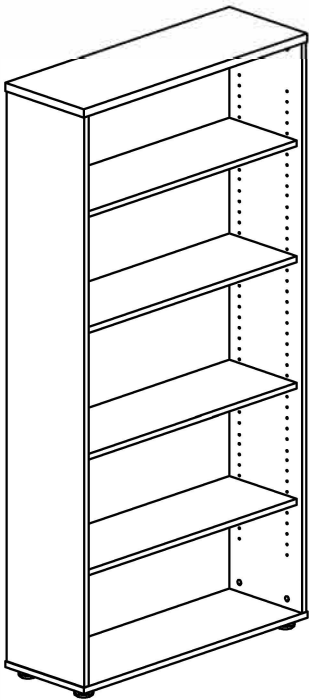

pin	6x35	1	20PCS
CAM		2	20PCS
Cam Cover		3	20PCS
Bot Minit		4	16PCS
CUSHION	25Hx ϕ 82	5	4PCS
Screw	4x30	6	4PCS

