







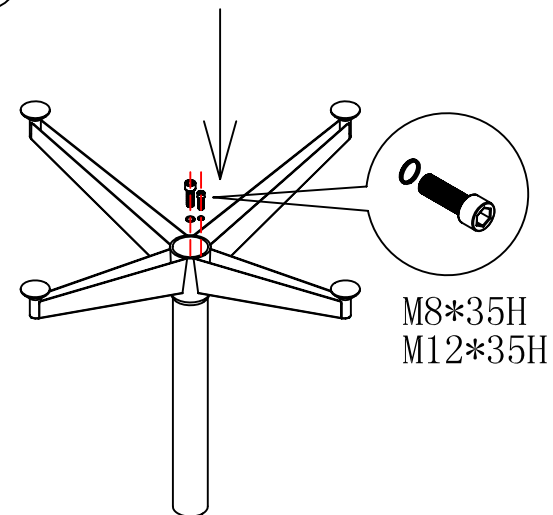


ASSEMBLY INSTRUCTIONS
TFR900




	M12*16H 2pcs		M8*16H 2pcs
	Ø12*2H 2pcs		Ø8*2H 2pcs
	M5*20H 8pcs		M8 1pcs
	M12 1pcs		Ø16 1pcs

1



2

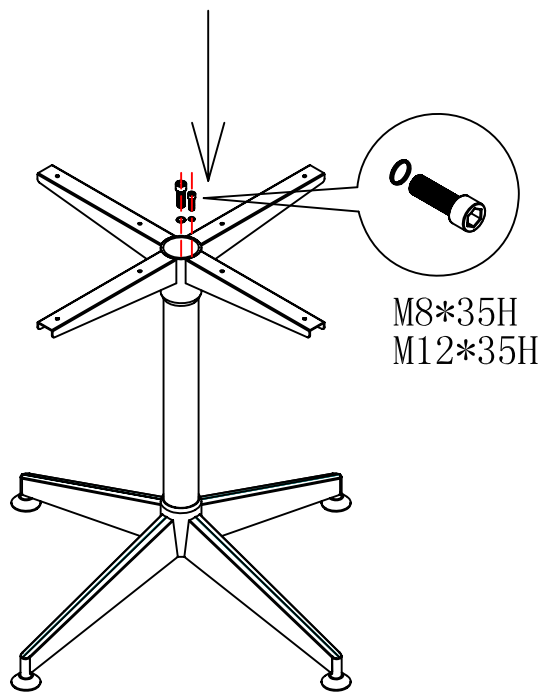

2

