

Glass Whiteboard Installation Guide

Installation of your glass whiteboard will require TWO people. Where possible install whiteboard to wall studs to deliver improved sturdiness. Where wall studs are not available Wall-Mates may be used to provide extra security when fixing your board to the wall.

What you will need


- Drill
- Tape Measure
- Spirit Level
- Pencil



Installation Instructions


STEP 1

With a tape measure and pencil, mark the chosen area for installation of your glass whiteboard. Use a spirit level to make markings straight. (Measure floor to bottom of board, then to the top of the board followed by the sides).

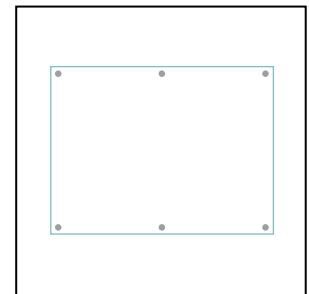


STEP 2

Place the board on the pencil markings, lining up the bottom edge of the board so that it is positioned on the bottom pencil line.

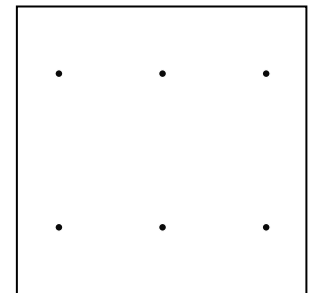

STEP 3

With board in place, mark the screw positions through the holes on the glass whiteboard. Place board to the side and drill holes.

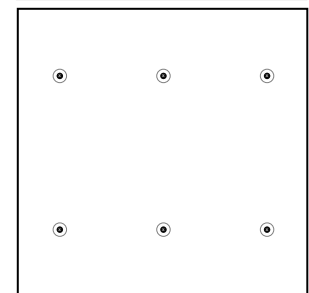


STEP 4

Screw stand-off anchors into wall or wall mate.
Screw the thread studs into place using your hand.

STEP 5

Line up the holes in your glass whiteboard with the stand-off pieces and screw on the stand-off caps until they are firmly in place.

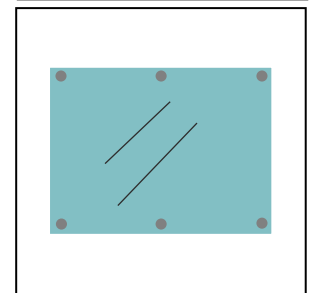

**Ensure wall area is clear of electrical wires before drilling.*

Whiteboards and Pinboards do not take any responsibility for injuries or breakages in the installation process of your whiteboard. Installation is done at your own risk and all safety measures should be taken to avoid injury.