

Installation Guide: Standard Frame Board



Installation of your standard frame board will require two people. It is recommended the board be affixed directly to wall studs for improved sturdiness. If wall studs are not available, Wall-Mates may be used to improve holding strength.

Required Tools



Drill



Tape Measure



Spirit Level



Pencil

Installation Instructions

STEP 1

With a tape measure and pencil, mark the chosen area for your standard frame board installation. Measure from the floor to the bottom of the board, then to the top, followed by the sides. Use a spirit level to ensure markings are straight.

STEP 2

Place the board on the pencil markings by lining up the bottom edge of the board along the bottom pencil line.

STEP 3





With the board in place, mark the screw positions through the screw holes. Remove the board.

STEP 4

Drill holes into the wall to suit the supplied wall plugs. If using Wall-Mates, follow the manufacturer's instructions.

STEP 5

Insert the wall plugs and reposition your board, fixing it into position with screws into the wall plugs. Cover the fixings with the corner caps.

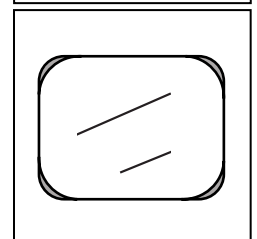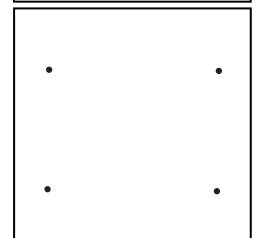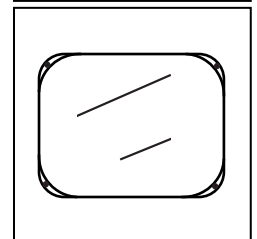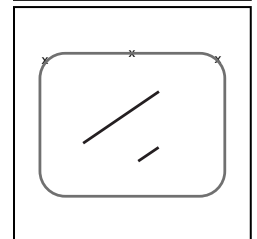

Always ensure wall area is clear of electrical wires before drilling. Whiteboards and Pinboards does not take any responsibility for injuries or breakages in the installation process of your pinboard. Installation is done at your own risk and all safety measures should be taken to avoid injury.