























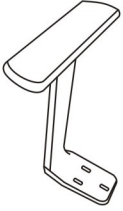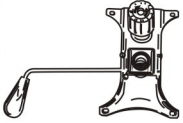



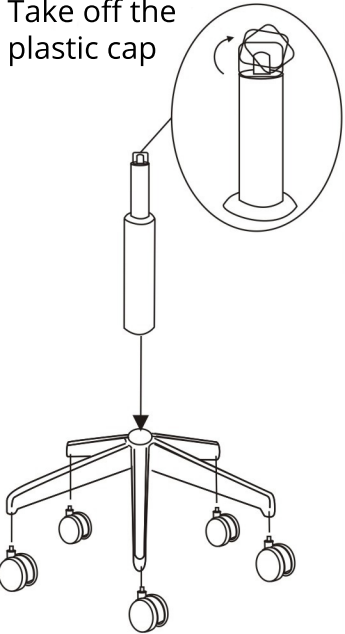


Magnum Mesh Chair


Back Upholstery	Seat Upholstery	Armrest	Mechanism	Gaslift	Base	Castors	Screw Sets																
							<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">S1 X2 M6x35</td> <td style="text-align: center;"></td> <td style="text-align: center;">S5 X8 M6x16x1.2</td> <td style="text-align: center;"></td> </tr> <tr> <td style="text-align: center;">S2 X4 M6x30</td> <td style="text-align: center;"></td> <td style="text-align: center;">S6 X1 M5</td> <td style="text-align: center;"></td> </tr> <tr> <td style="text-align: center;">S3 X4 M6x40</td> <td style="text-align: center;"></td> <td style="text-align: center;">S7 X4 M6x20x10mm</td> <td style="text-align: center;"></td> </tr> <tr> <td style="text-align: center;">S4 X4 M6x20</td> <td style="text-align: center;"></td> <td></td> <td></td> </tr> </table>	S1 X2 M6x35		S5 X8 M6x16x1.2		S2 X4 M6x30		S6 X1 M5		S3 X4 M6x40		S7 X4 M6x20x10mm		S4 X4 M6x20			
S1 X2 M6x35		S5 X8 M6x16x1.2																					
S2 X4 M6x30		S6 X1 M5																					
S3 X4 M6x40		S7 X4 M6x20x10mm																					
S4 X4 M6x20																							
		x2				x5																	

Step 1


Take off the plastic cap



Step 2

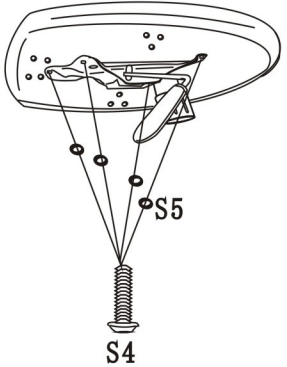

Step 3

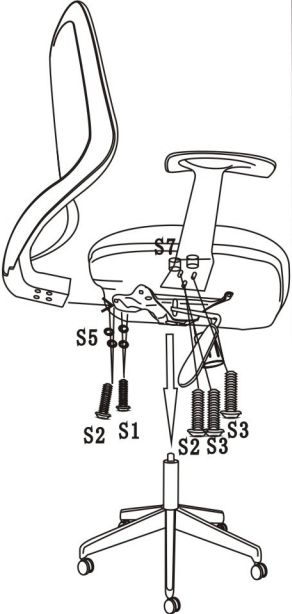

Step 3

