
3 4 (14) 10

(19C


GWA18 ASSEMBLY INSTRUCTIONS

PART LIST


<u>Part</u>	No Compon	ent <u>Quantity</u>
Part 01 02 03 04 05 06 07 08 09 10 11 12 13	No Compon RH Back LH Back RH SIDE LH SIDE Bottom Channel Bottom Front Bottom Tray Top RH DOOR LH DOOR Top Hinge Pin (Stra Bottom Hinge Pin (Top Shelf	01 01 01 01 01 01 01 01 01 01 01 ight) 02
14 15 16	Partition Small shelves	01 02
15 16 17	Small shelves Coat rail (hanger Ro Door Stoppers	02 od) 01 04
18 19	Rivets 4x8 Rivets 4x8 STEEL	56 02

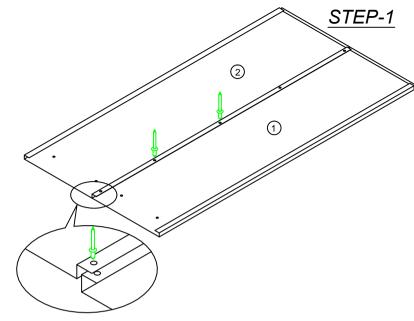


- Place the RH back on the assembly table.
 Place the LH back on the Right hand back fold as shown and rivet.

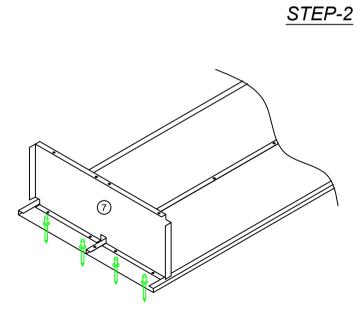


Fix the Bottom tray as shown and Rivet from rivet which will be riveted along with TOP. outside.

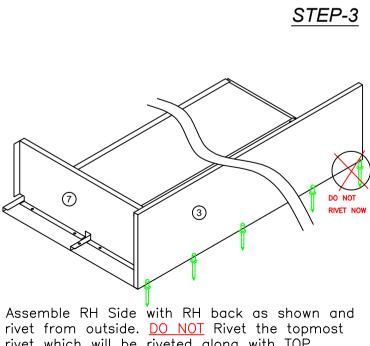

Similarly Assemble LH Side.

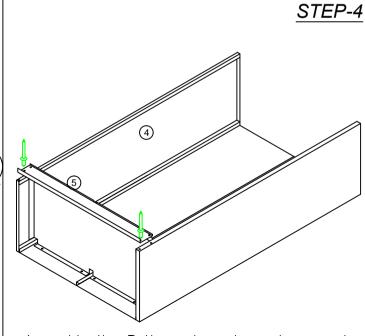


Assemble the Bottom channel as shown and Rivet with sides.

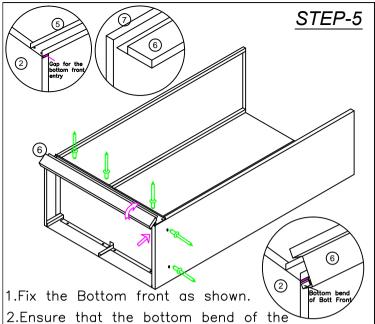


2.Ensure that the bottom bend of the bottom front will engage with the sides and the bottom channel as shown in the enlarged view.

3.Check that the Bottom tray comes aboove the bottom front and Rivet together.

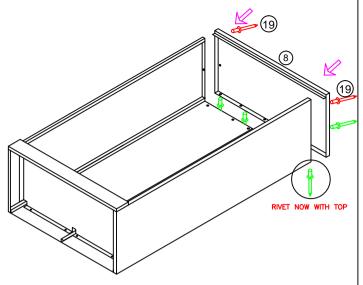


STEP-6


Assemble the top and rivet with Backs and sides as shown. Now the carcass is ready. please erect the carcass for doors fixing.

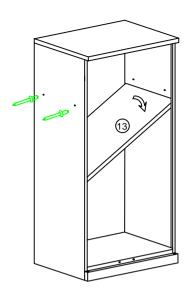


Assemble the Top shelf as shown and rivet with sides

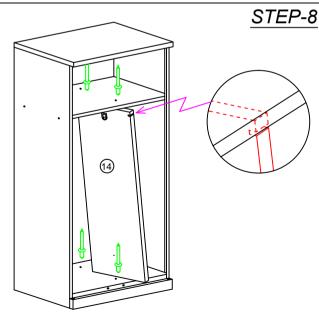

Assemble the Partition as shown and rivet with Top shelf and bottom tray. Ensure that the cut on the partition will engage in the Top shelf bend.

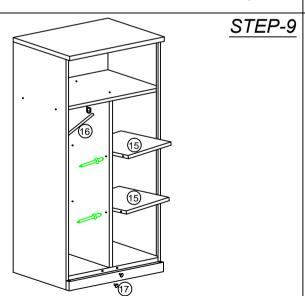

- 1. Now Assemble the two small shelves in RH side compartment as shown and rivet with side and partiton.
- 2. Fix the coat rail (hanger Rod) in LH side compartment as shown.
- 3. Fix the door stoppers

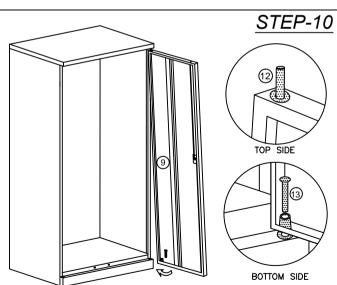

- 1. Insert the Top Hinge pin in the top Hinge Bush and fix the Door as shown in the drawing.
- 2. Position the Door on the Bottom front and then insert the bottom Hinge pin from top as shown.
- 3. Similarly fix the LH Door.

page 2 of 2

STEP-7