





**EPIC OFFICE**  
furniture.com.au

## **ASSMEBLY INSTRUCTIONS R2O-ADDRESS**

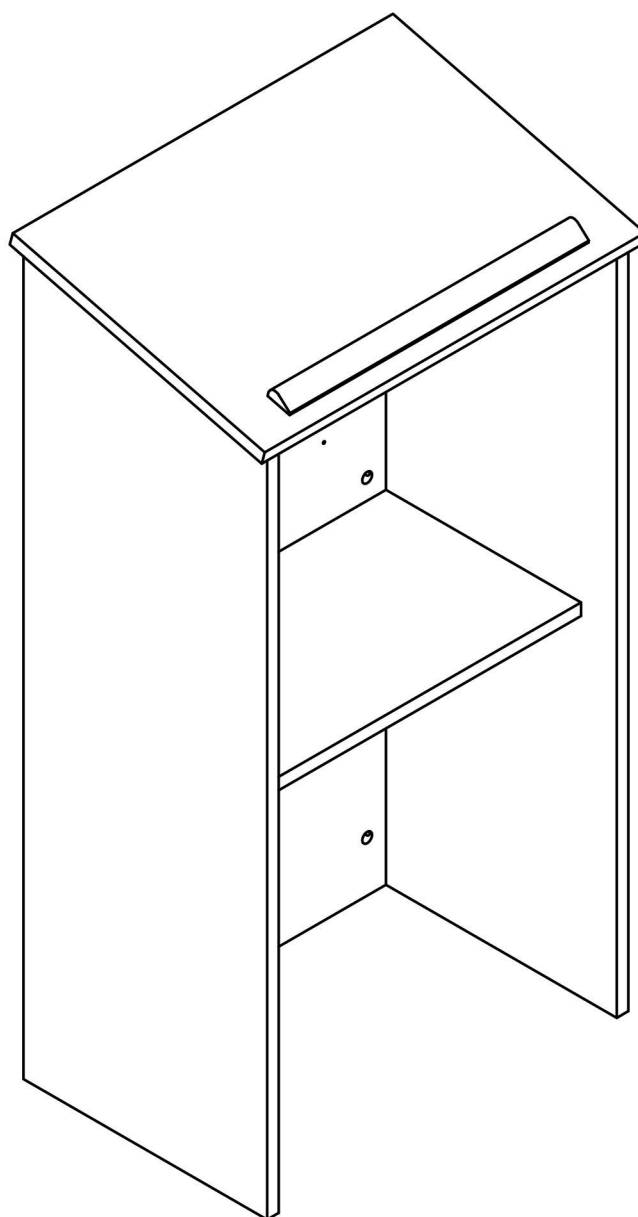

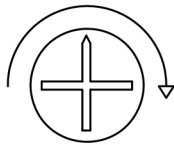


Turn clockwise to lock cam with bolt.




The arrow direction=front

Incorrect Correct

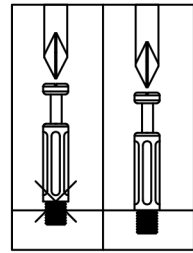

Screw cam bolts all the way in.

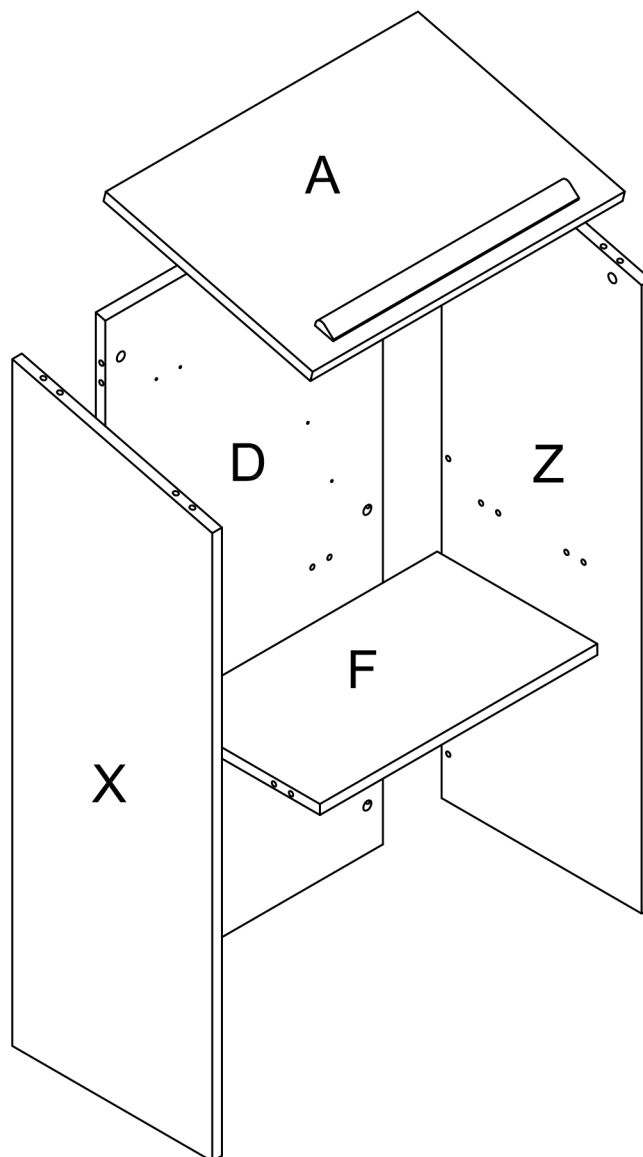

# PARTS LIST

ITEM	DESCRIPTION	QTY.	PACK.
A	Top panel	1	1 OF 1
D	Back panel	1	1 OF 1
X	Left side panel	1	1 OF 1
Z	Right side panel	1	1 OF 1
F	Shelf	1	1 OF 1

# PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
c1	6*35 Cam Bolt	12	c2	( 5/8") Cam Cover	12
d1	8*30 Dowel pin	10			



c1 6\*35 Cam Bolt-12



d1 8\*30 Dowel Pin-10




c2 ( 5/8") Cam Cover-12

Pre-installed parts



c1 Cam


## STEP 4

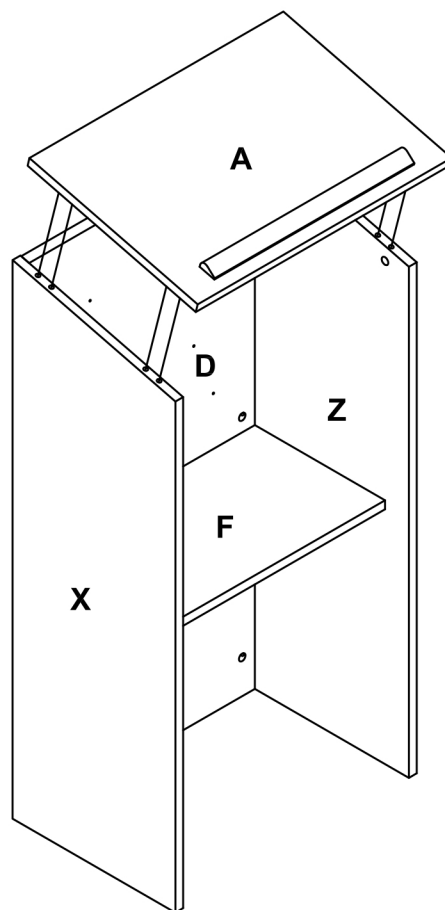

### **Panel A assembly.**

1. Insert cam bolts on panel X and Z into cams on panels D and F and tighten in a clockwise direction as illustrated above.


## STEP 2

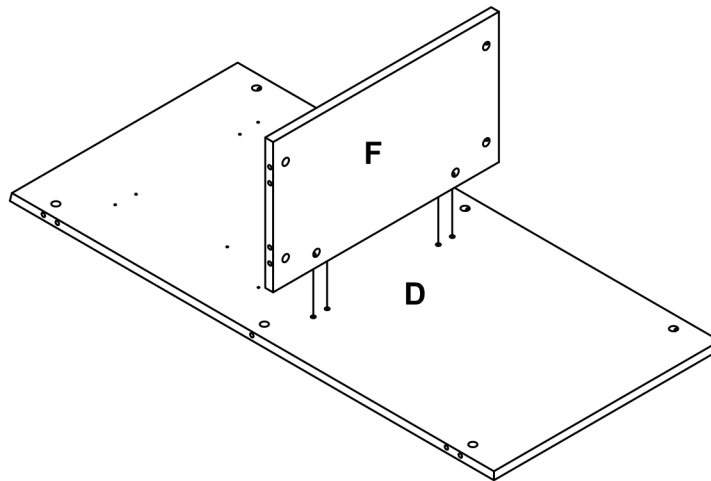

### **Panel F and D assembly.**

1. Insert cam bolts on panel D into cams on panels F and tighten in a clockwise direction as illustrated above.


## STEP 3

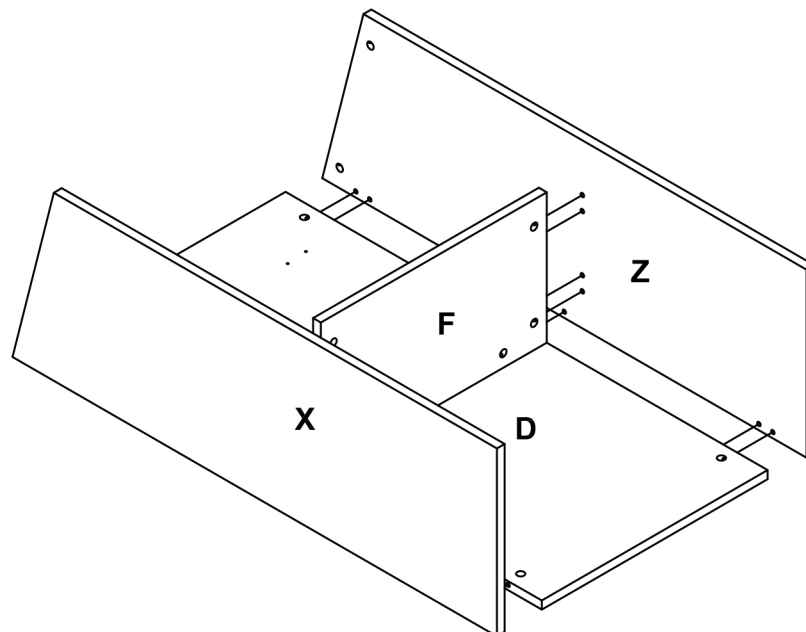

### **Panel X and Z assembly.**

1. Insert cam bolts on panel X and Z into cams on panels D and F and tighten in a clockwise direction as illustrated above.

## STEP 4

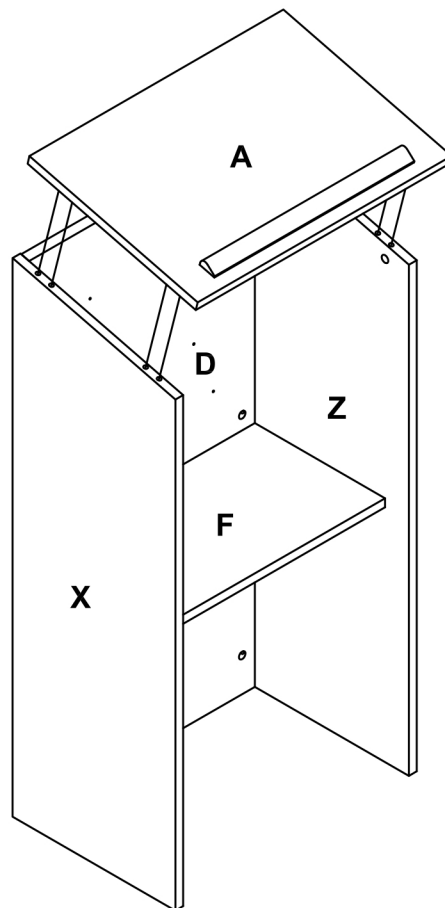

### **Panel A assembly.**

1. Insert cam bolts on panel X and Z into cams on panels D and F and tighten in a clockwise direction as illustrated above.