


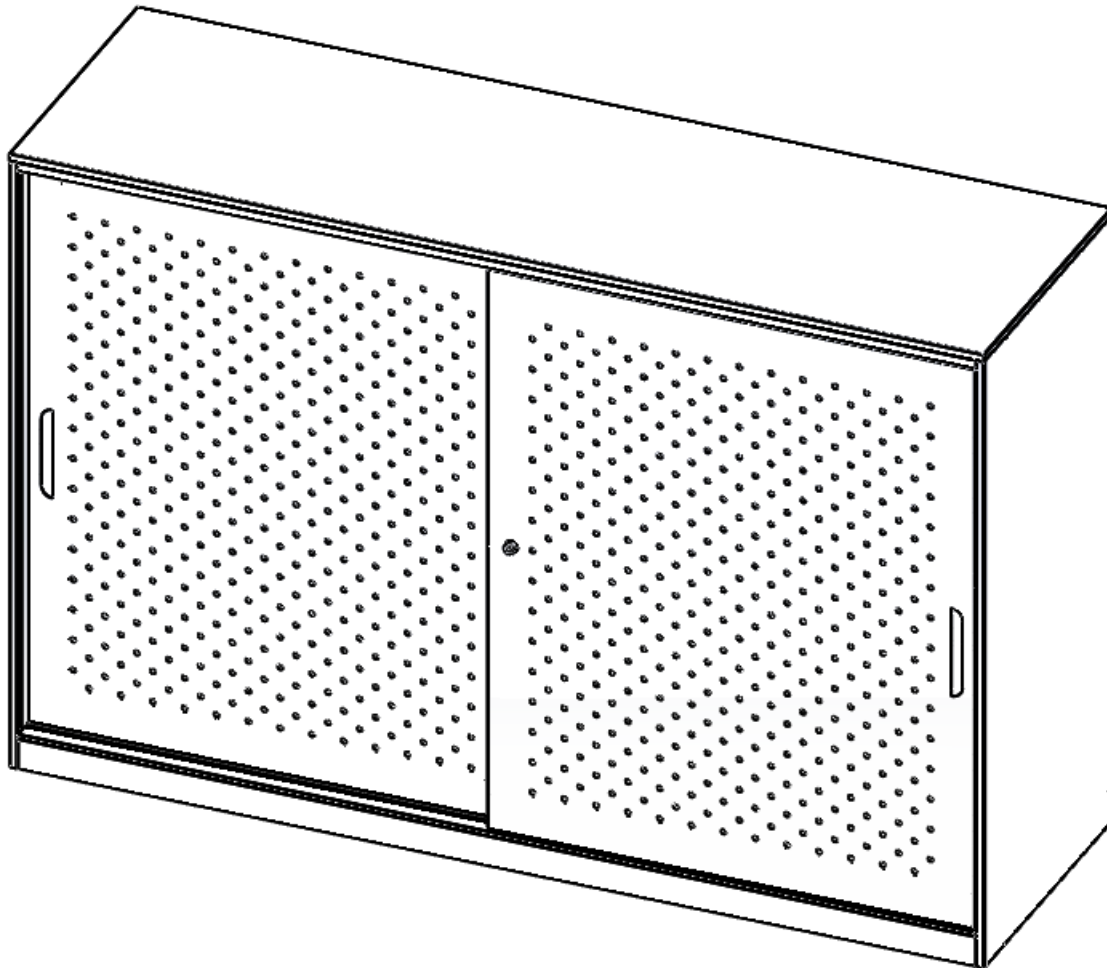














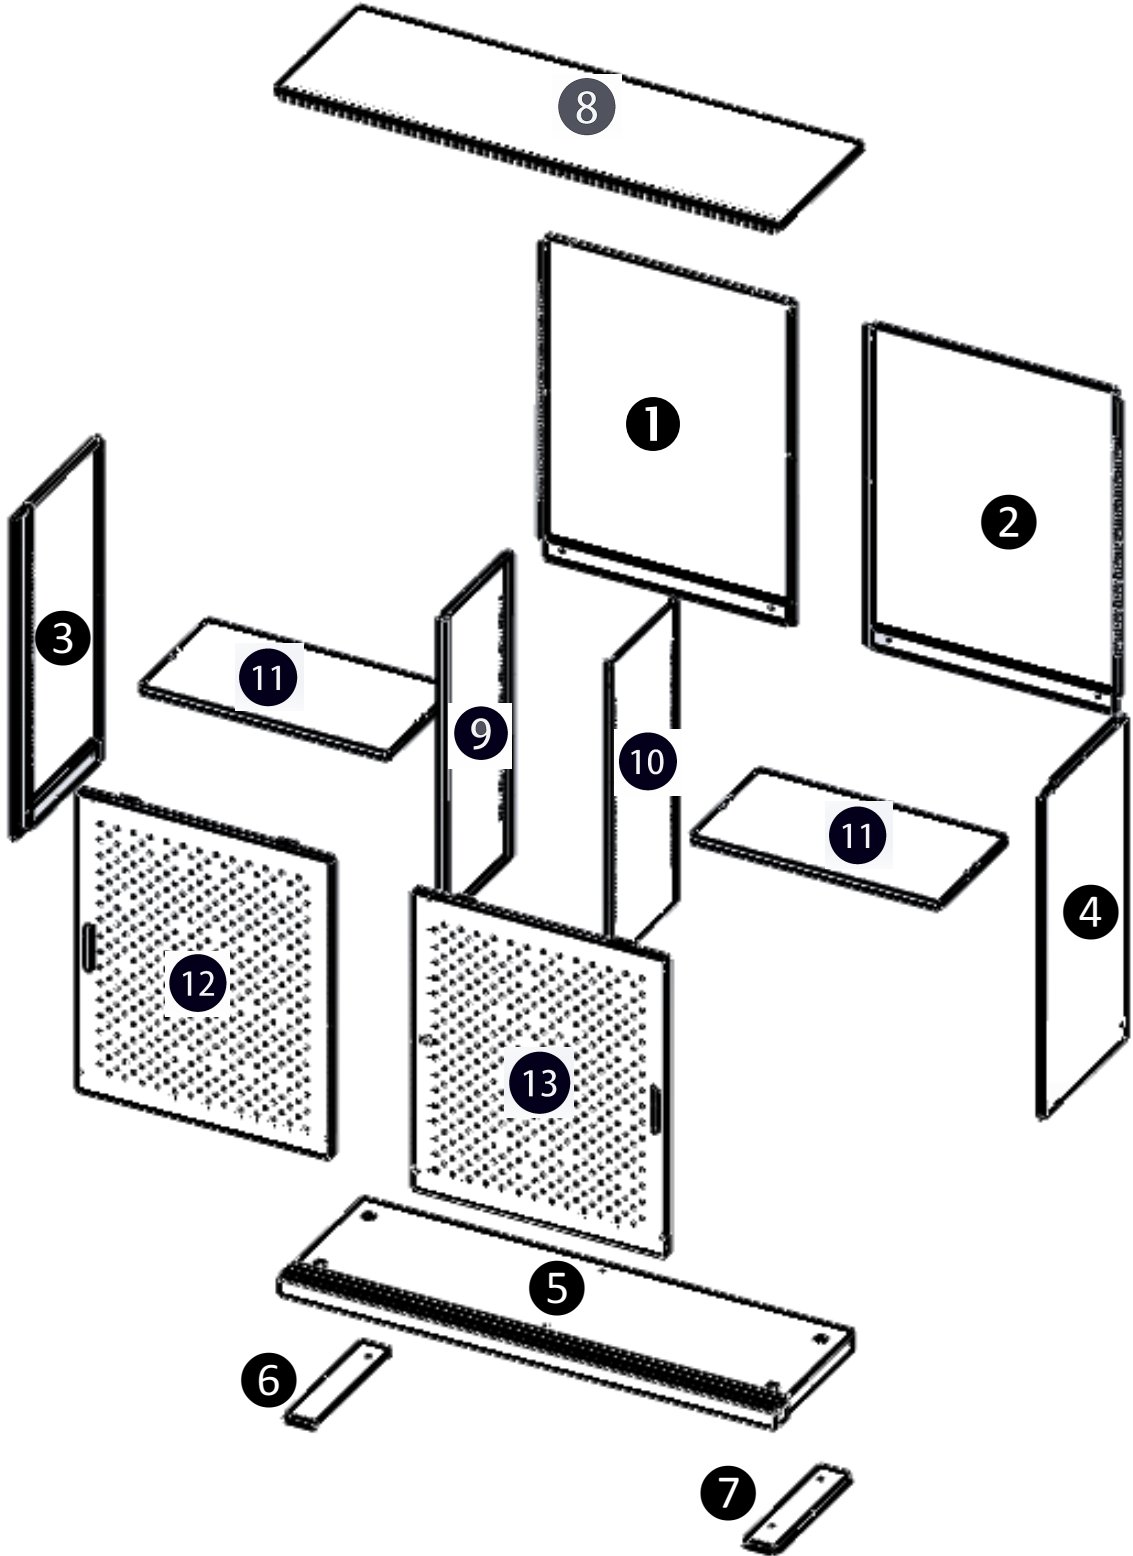


# GO Perforated Door Cupboard - Installation Instructions





 30MIN			 M5	 M4	 M2
---	---	---	--	--	--



<b>A</b>  X13 M4X8	<b>B</b>  X12 M6*12	<b>C</b>  X15 M5*10	<b>D</b>  X32 M4*10	<b>E</b>  X2 M4*12	<b>F</b>  X1/1	<b>G</b>  x8	<b>H</b>  x8	<b>I</b>  x4	<b>G</b>  x4	<b>K</b>  x4
---	---	---	---	--	---	---	---	---	---	---





step 1

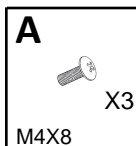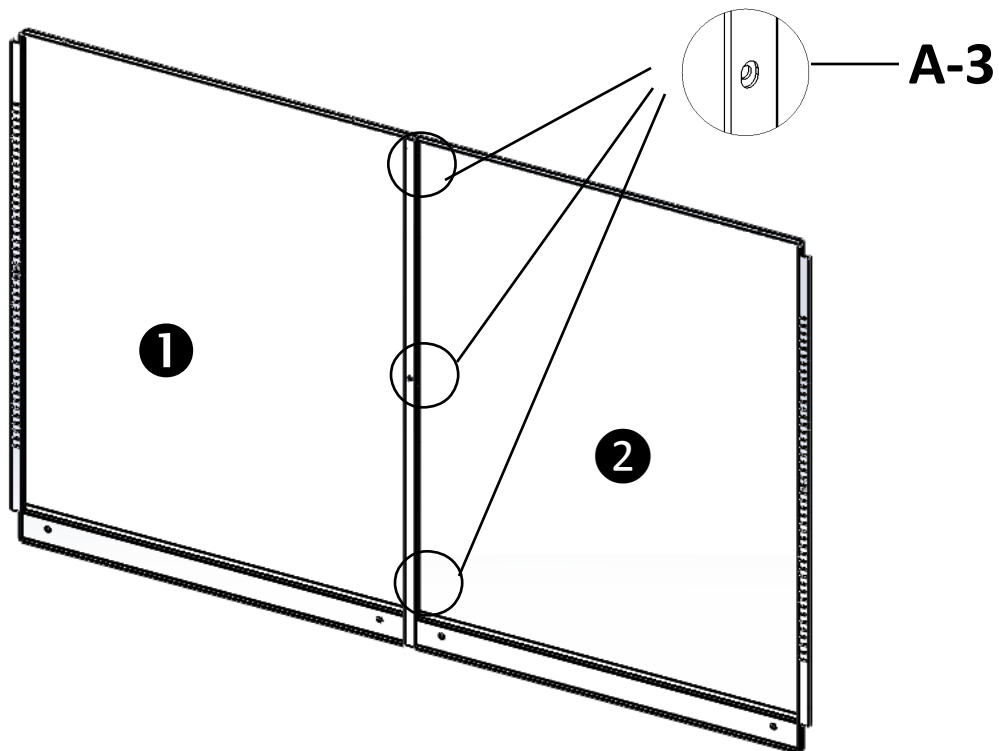



step 2

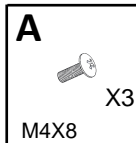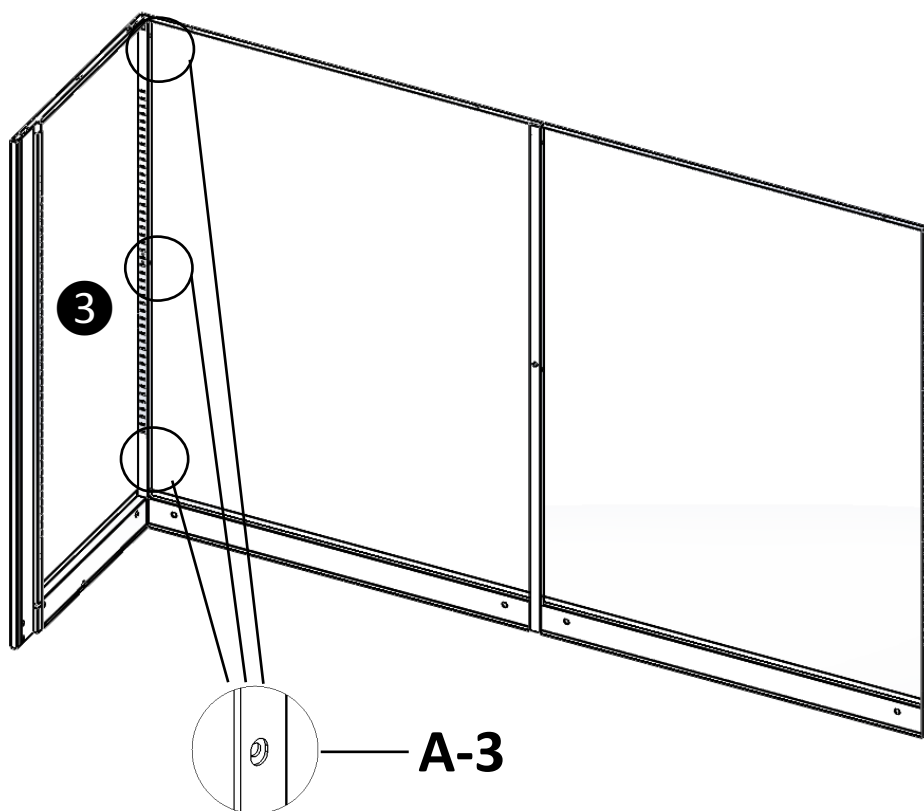

step 3

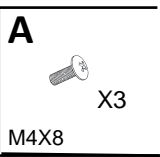
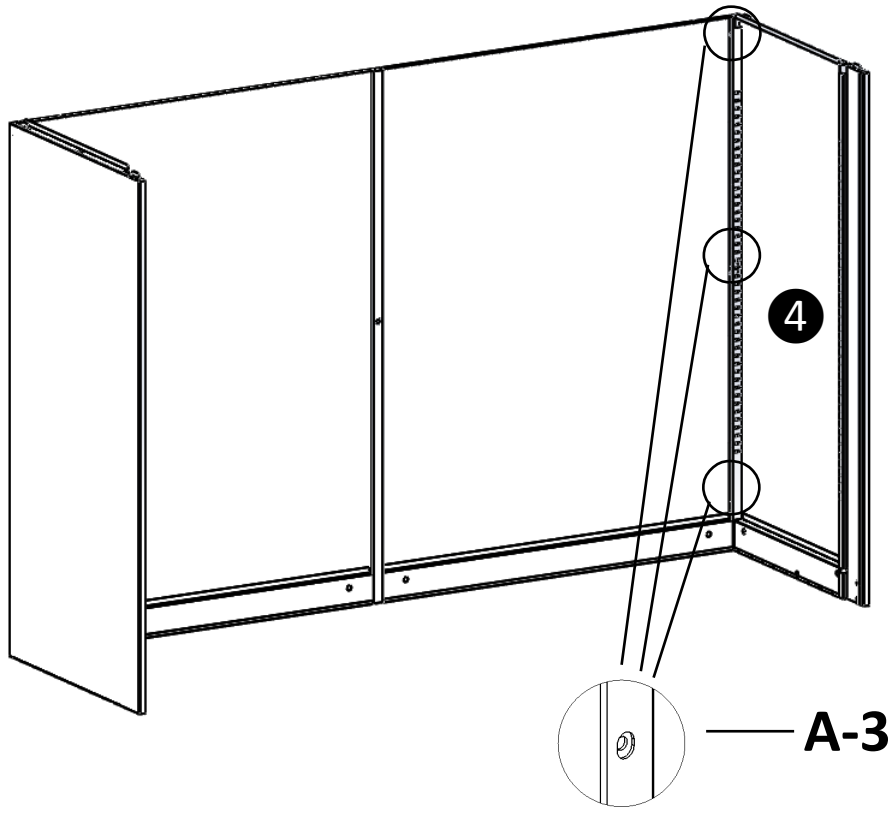


step 4

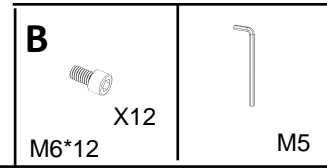
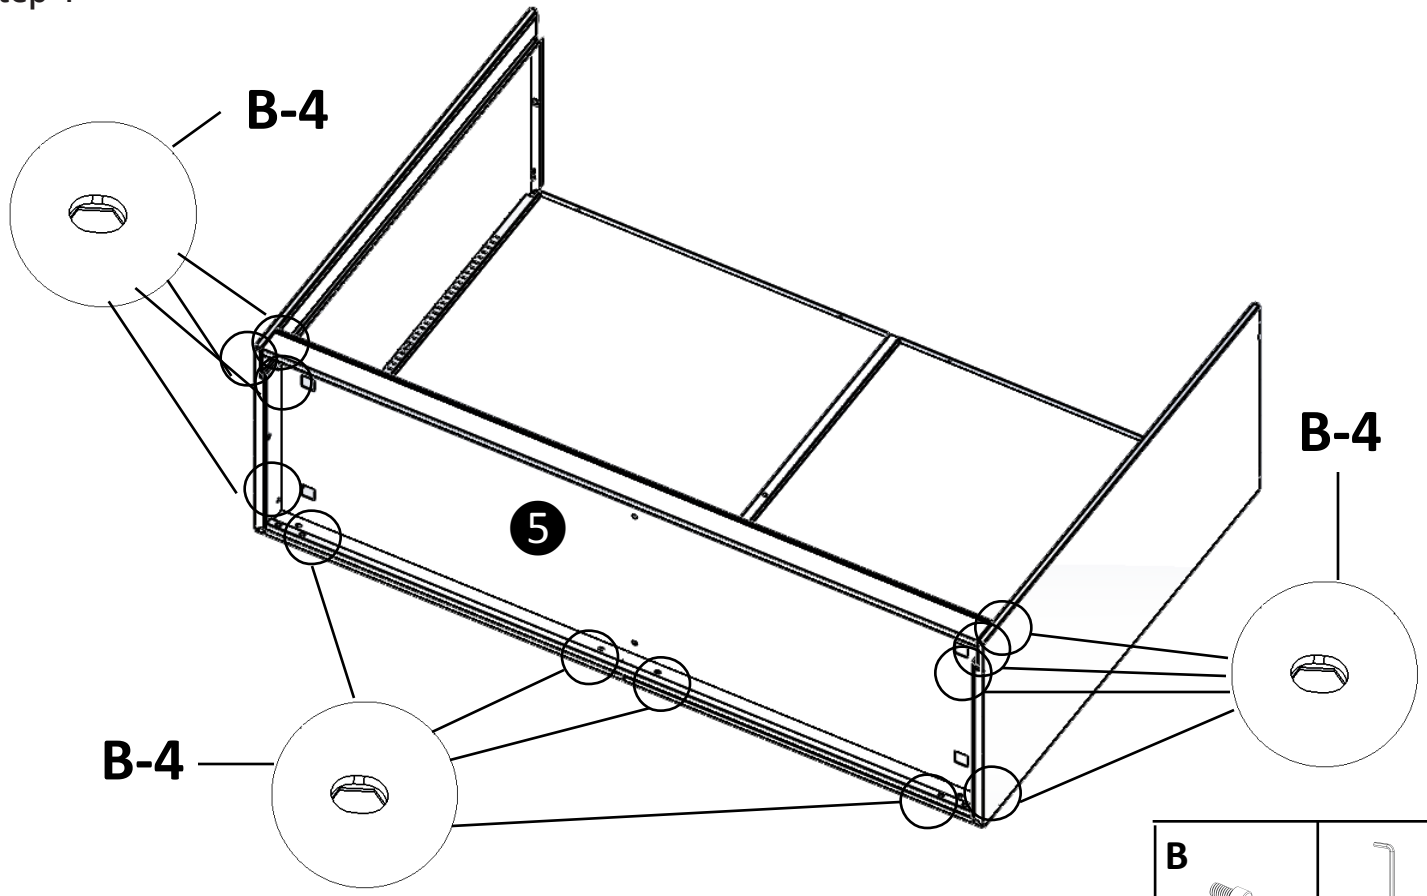







step 5

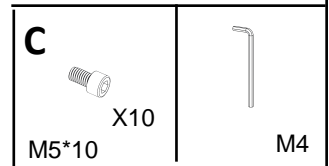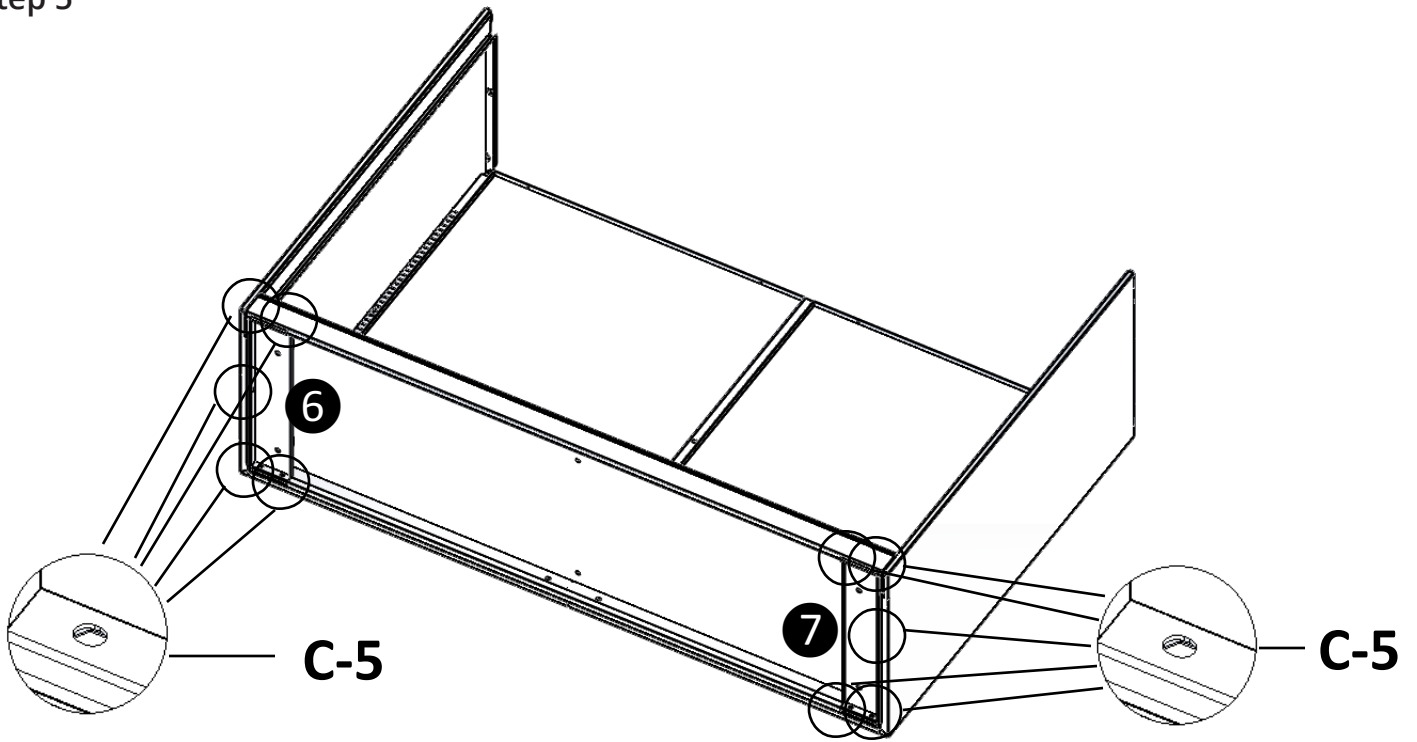



step 6

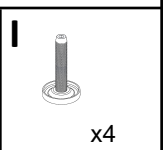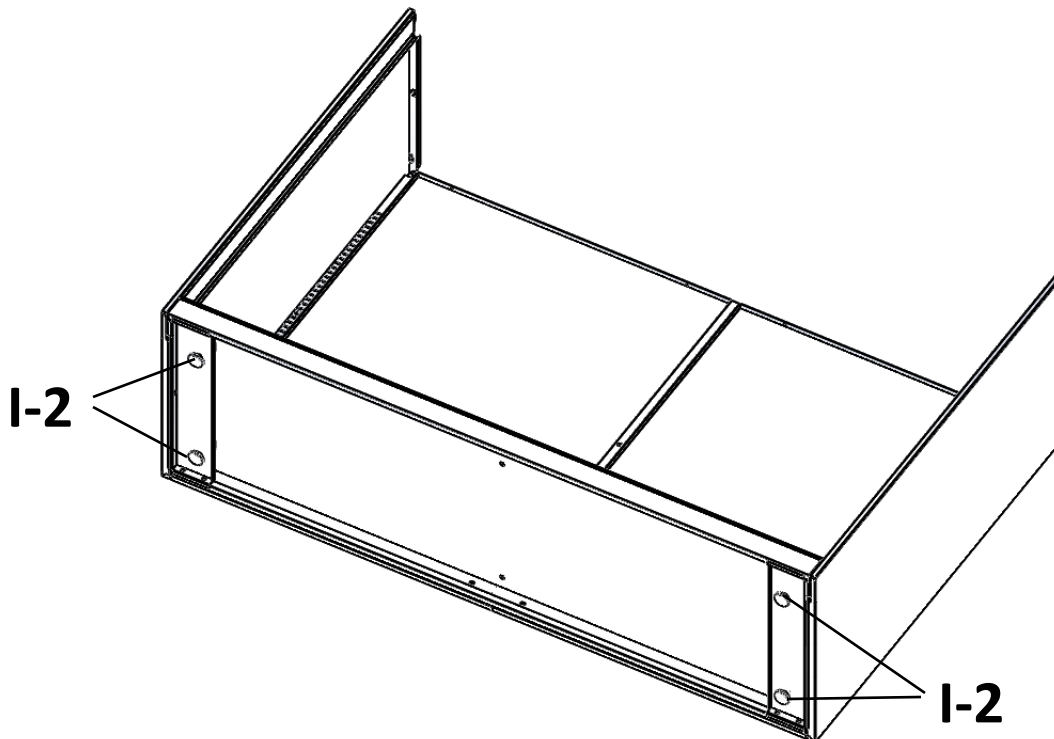


step 7

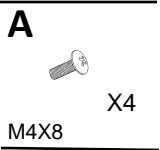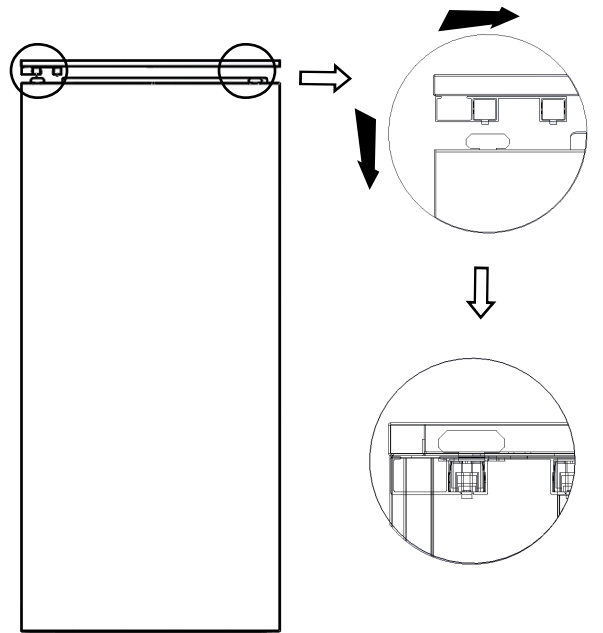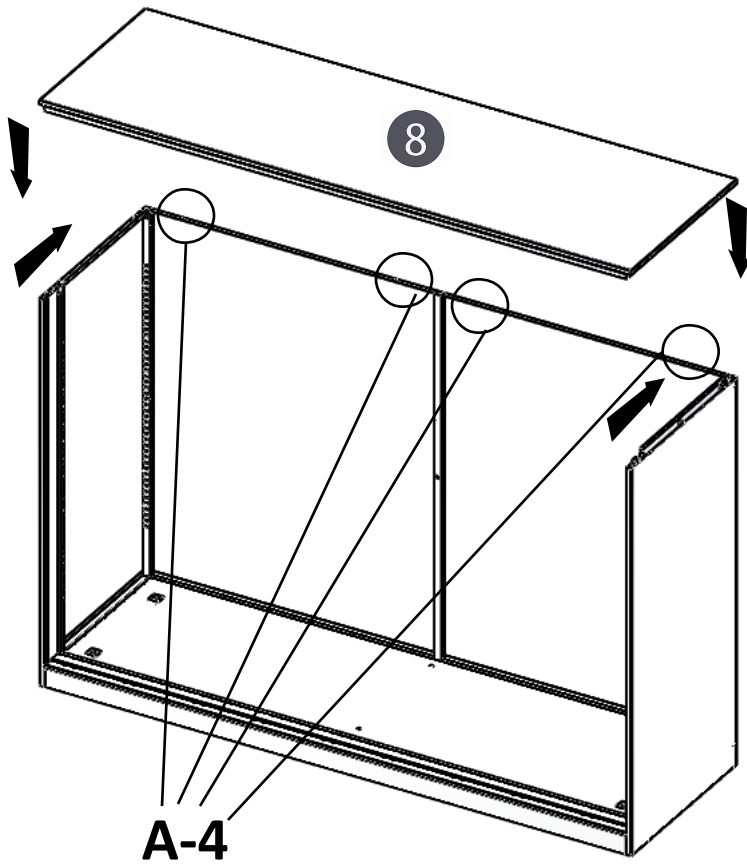


step 8

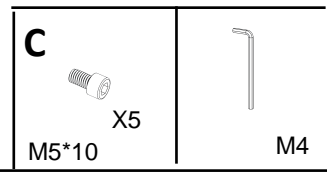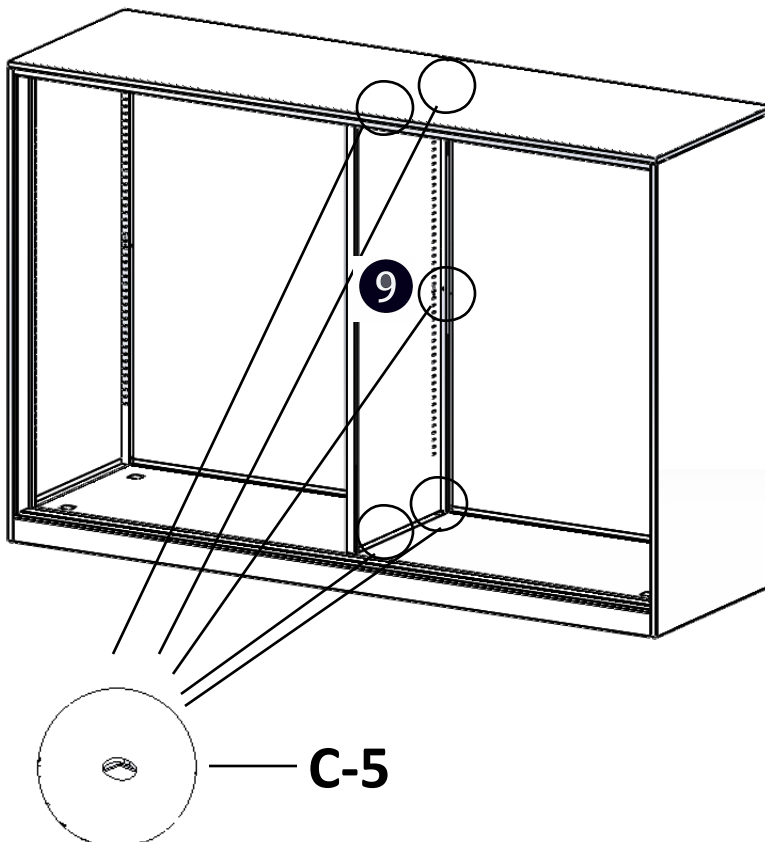

step 9

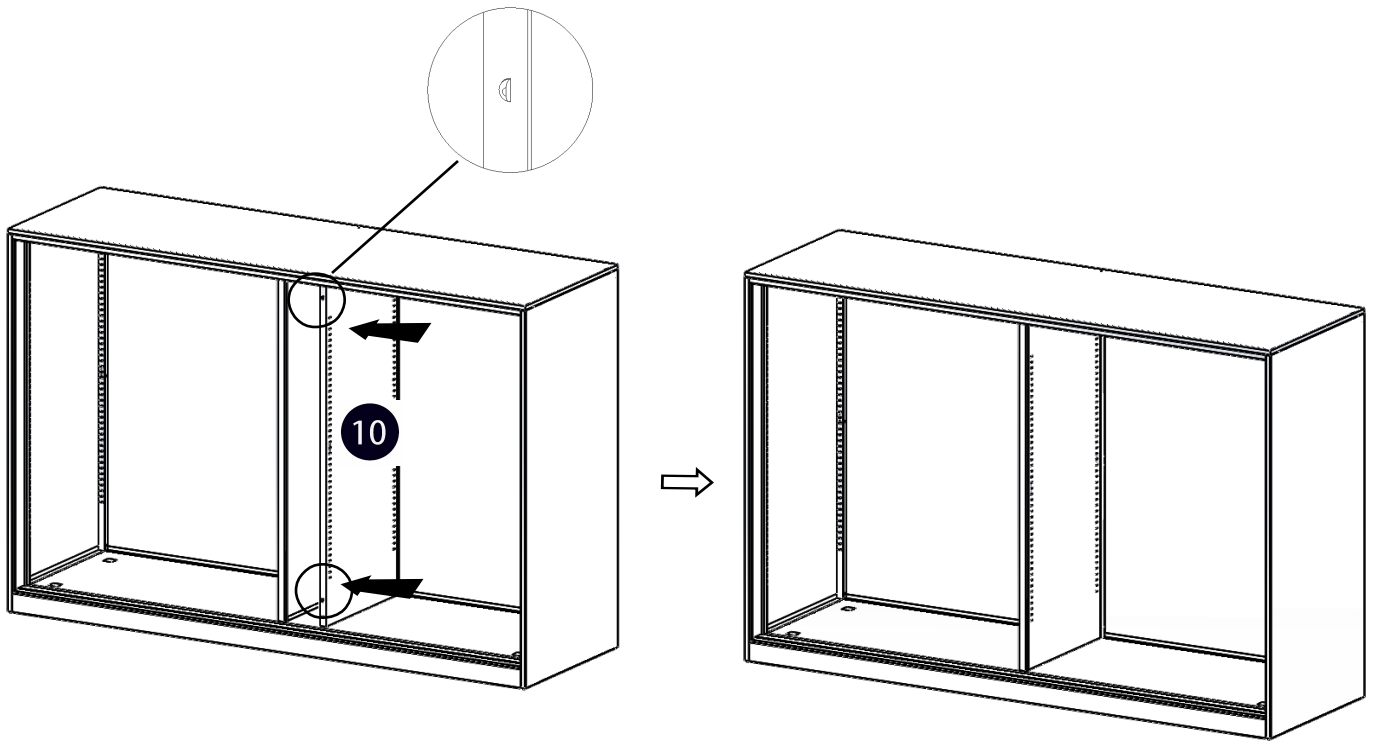

step 10



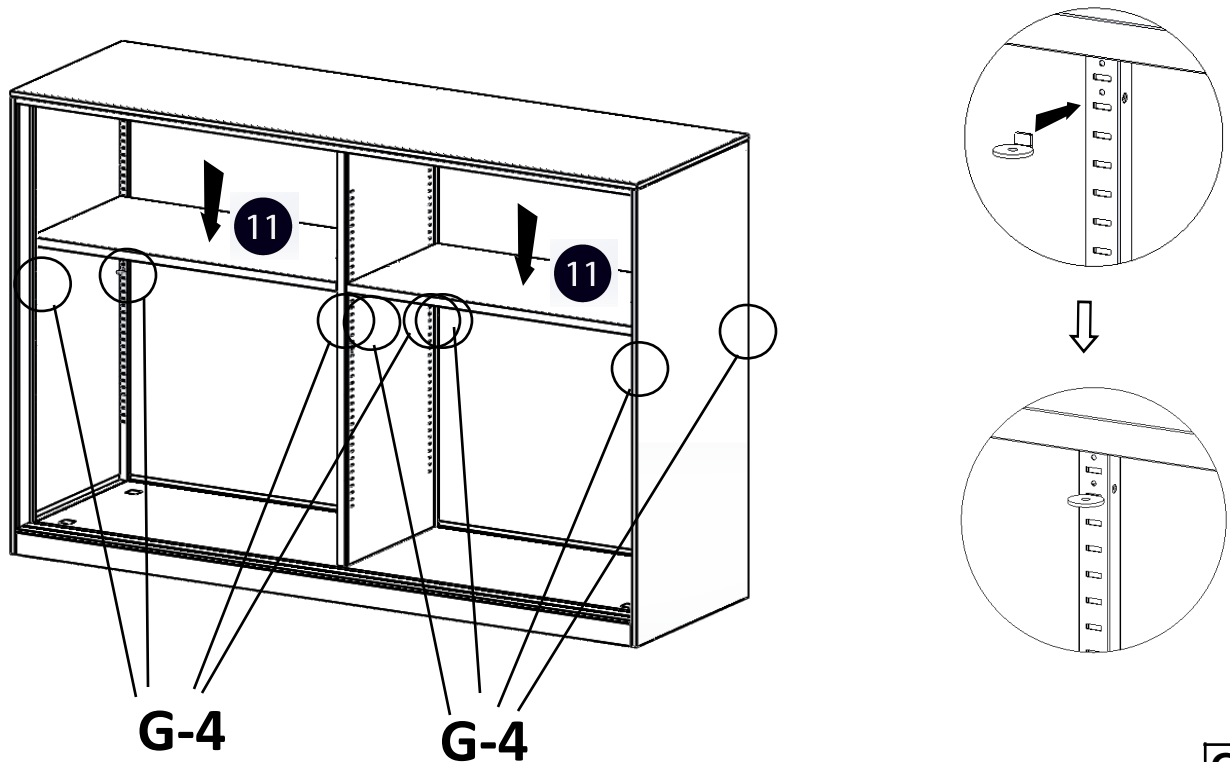


**G**





x8


step 11

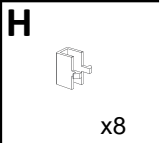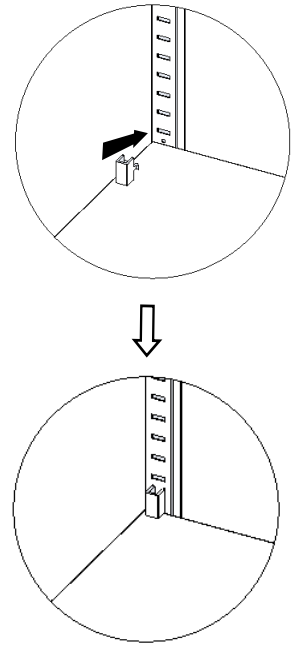
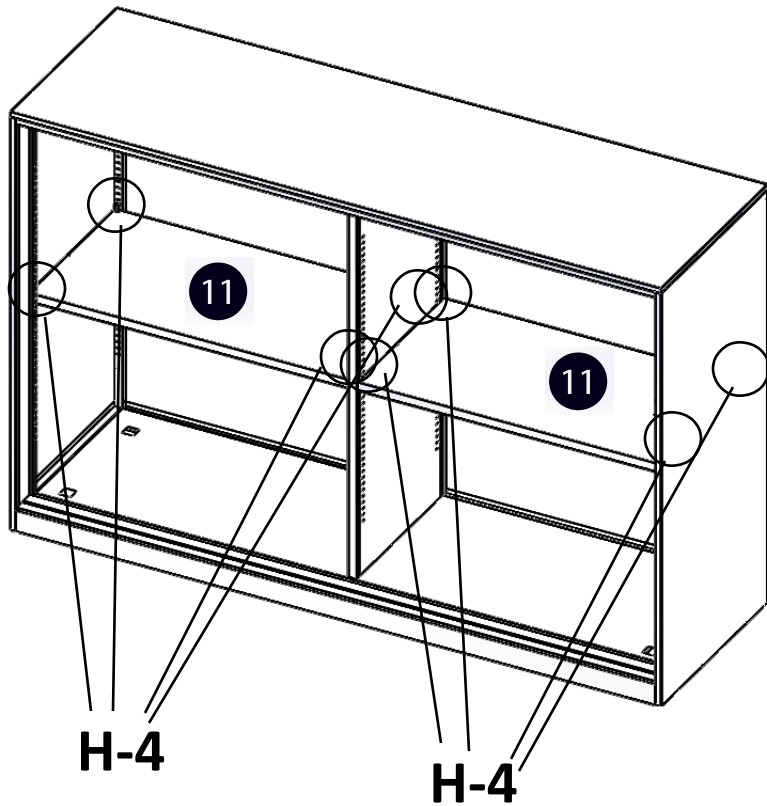



step 12

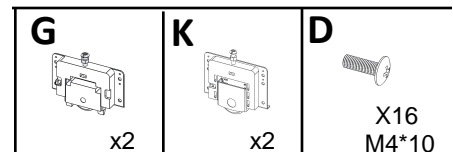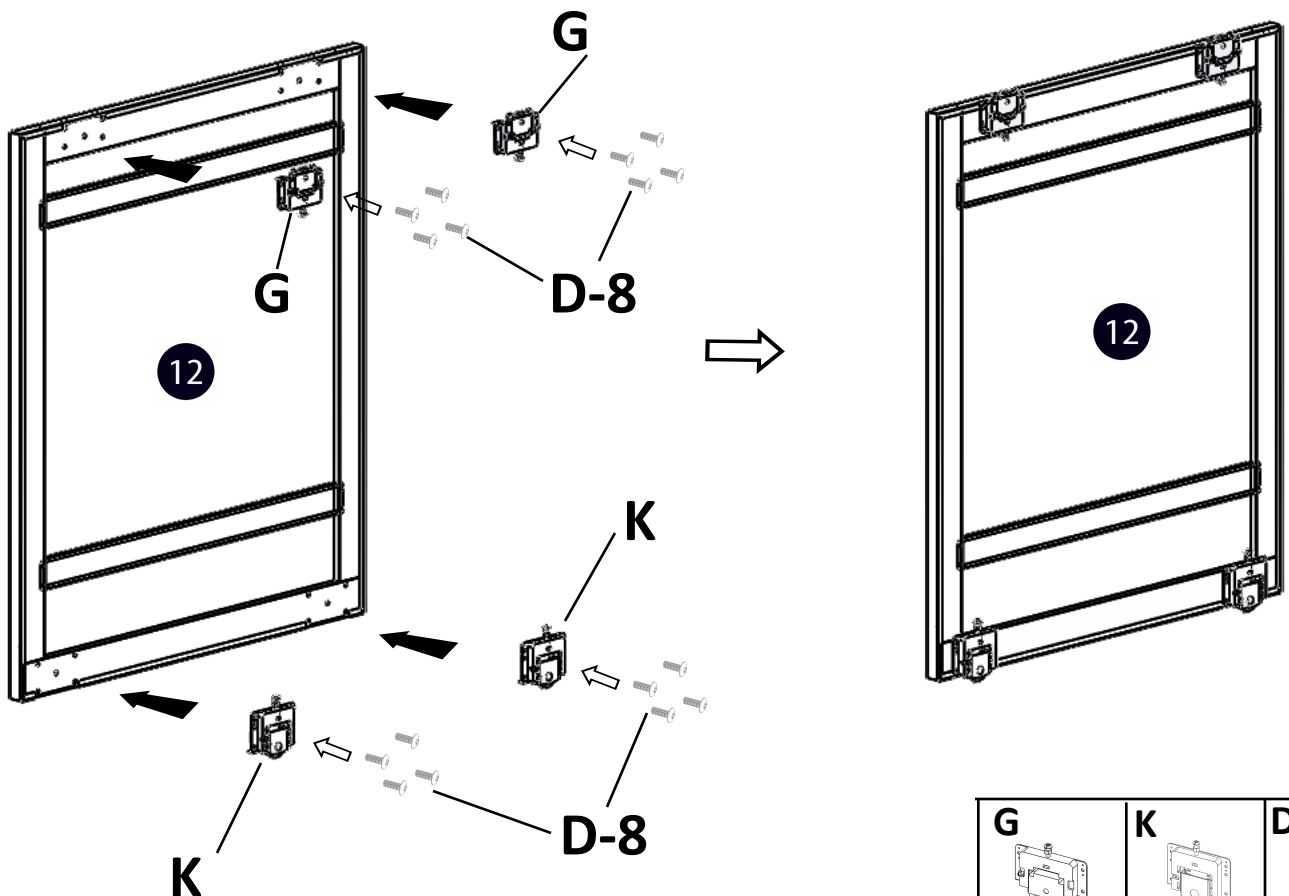




step 13

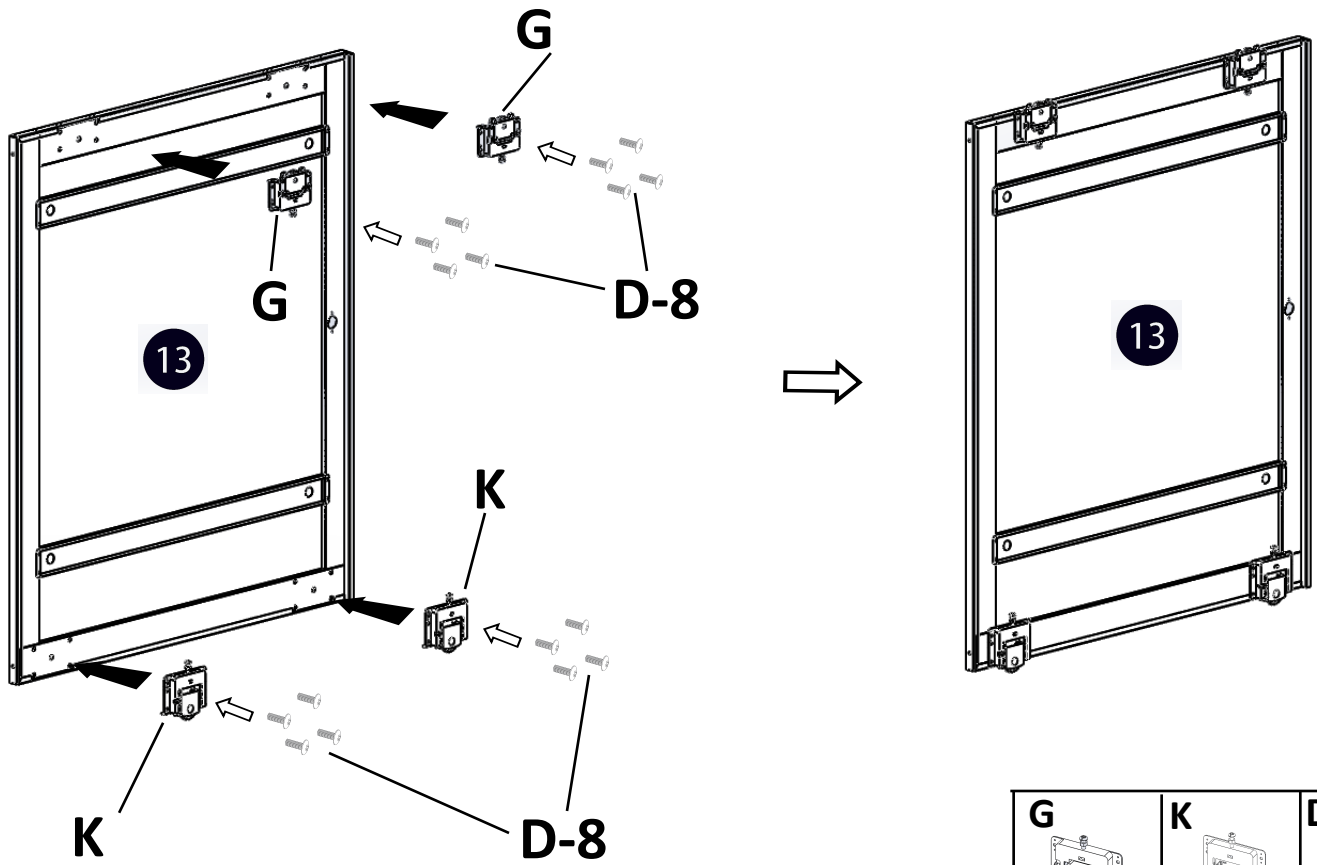


<b>G</b>  x2	<b>K</b>  x2	<b>D</b>  X16 M4*10
--	--	--

step 14

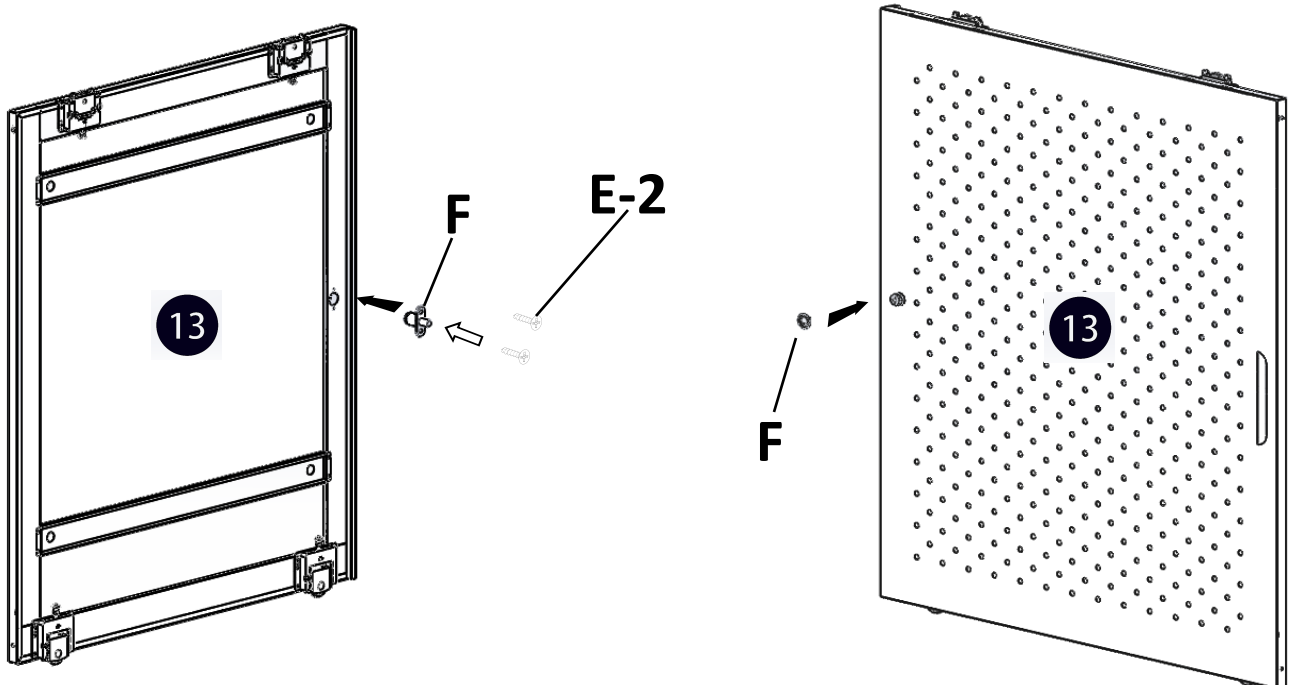


<b>E</b>  x2 M4*12	<b>F</b>  x1/1
--	---


step 15

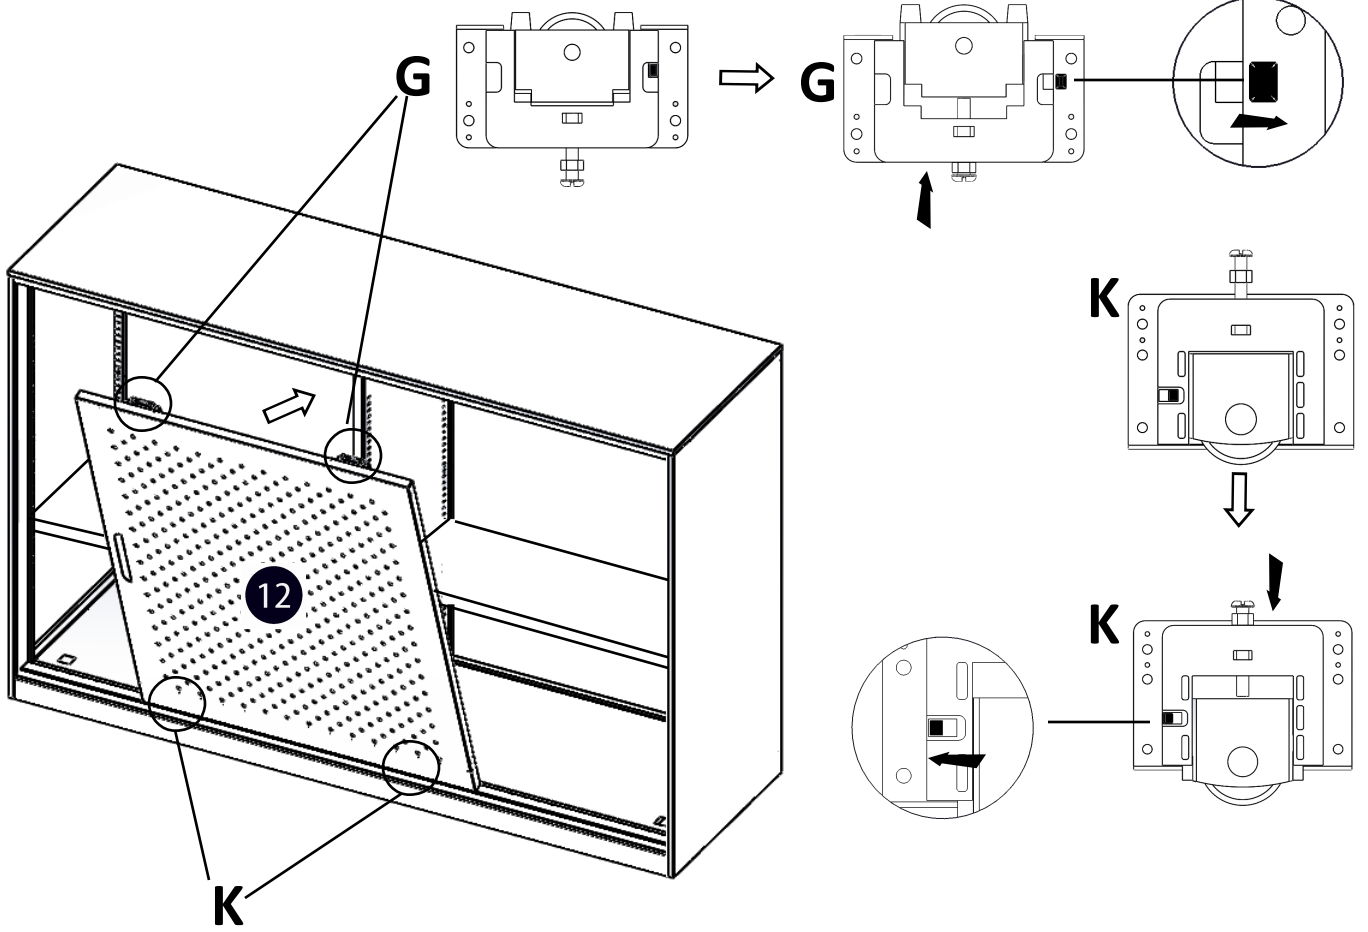

step 16

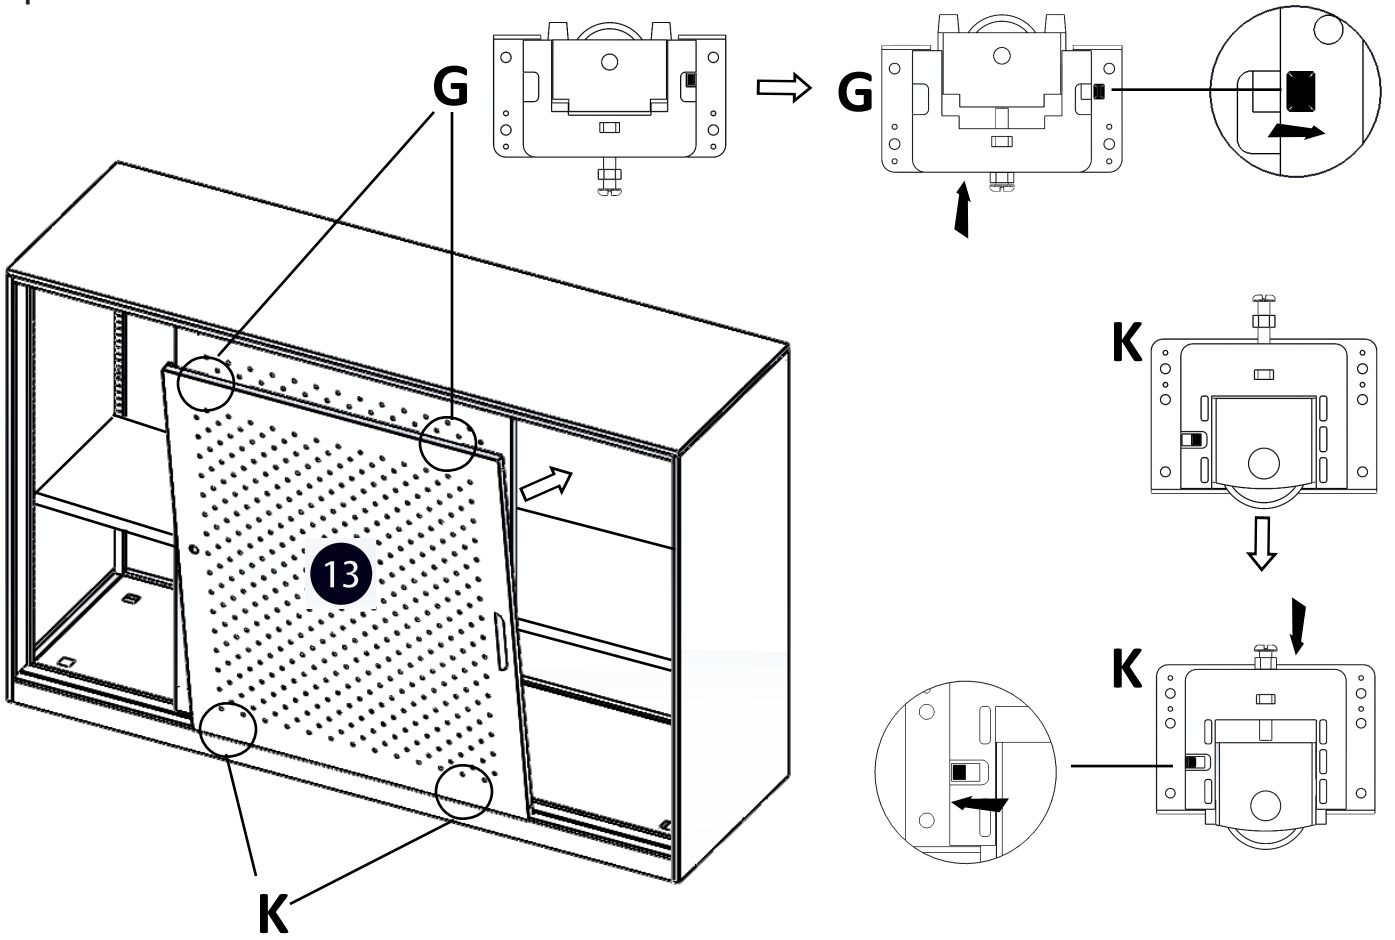

step 17

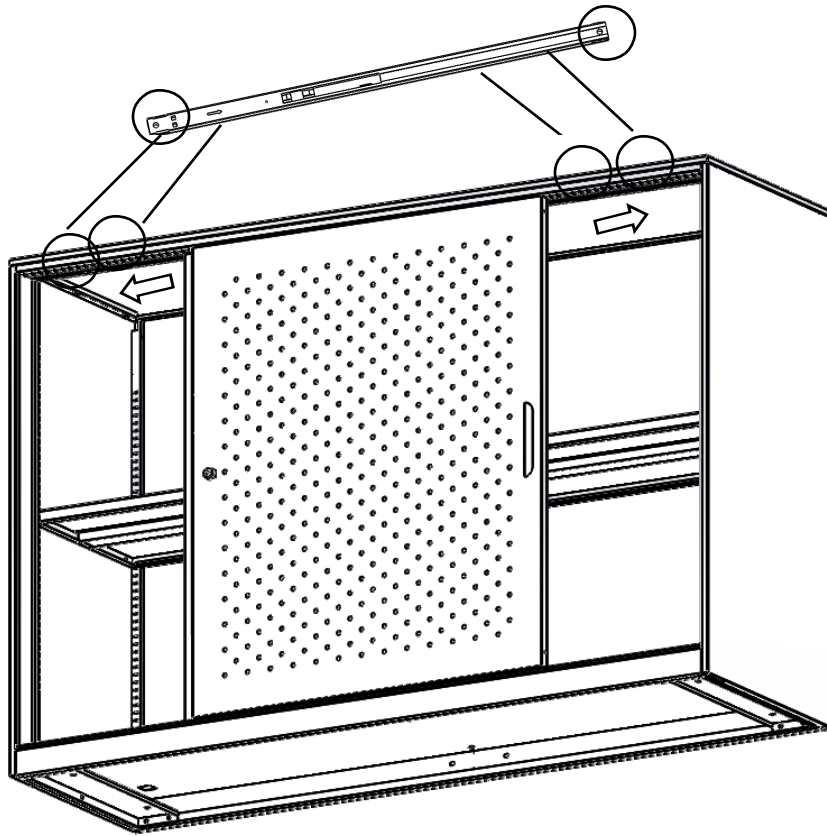

M2

