



## PUMA installation instructions

### Thick panel


#### 1 Cutouts & screw positions

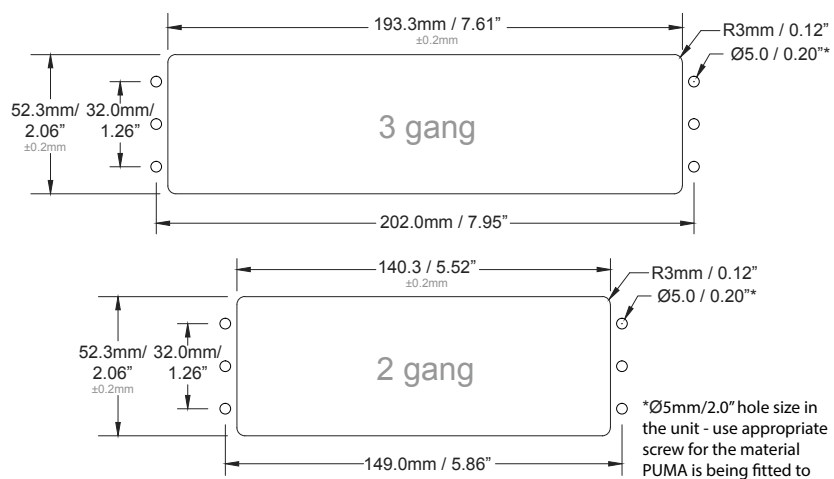


#### 2 Remove frame

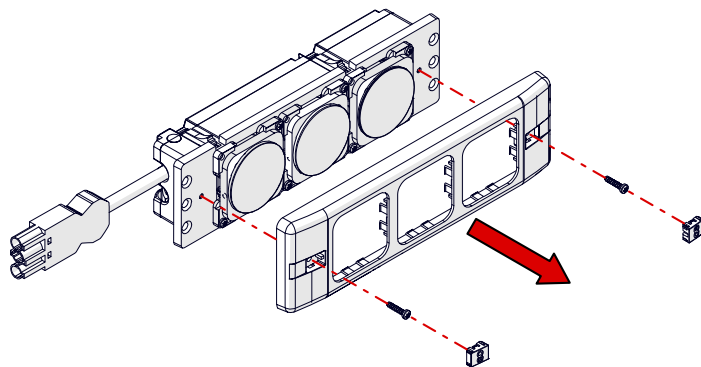


#### 3

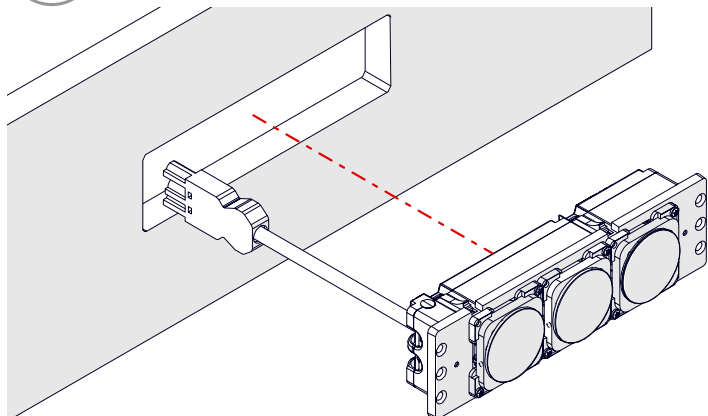


#### 4 Screw PUMA in place

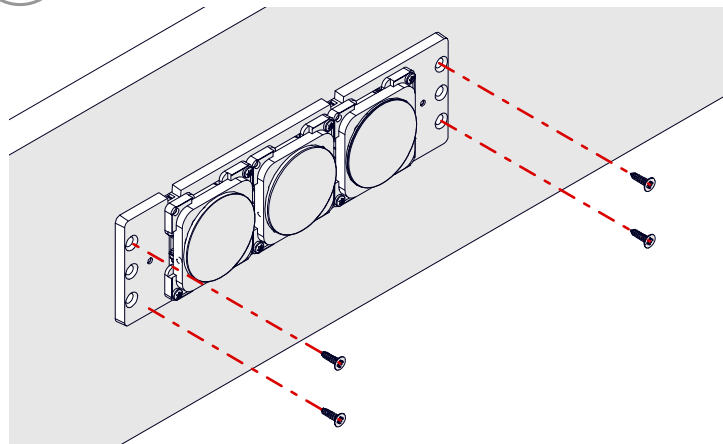

#### 5 Fix frame to PUMA


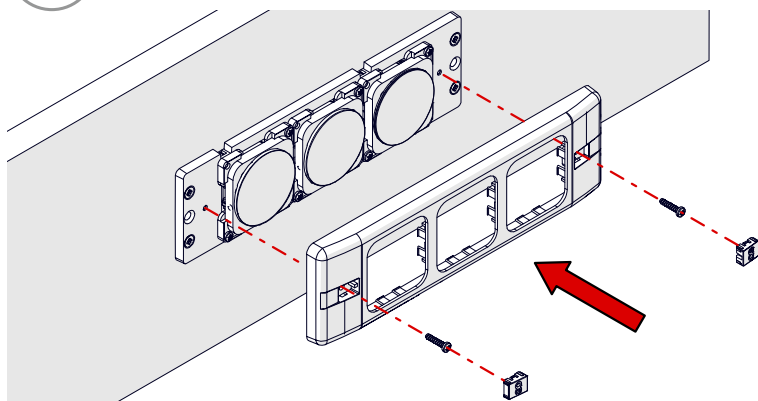


#### 6



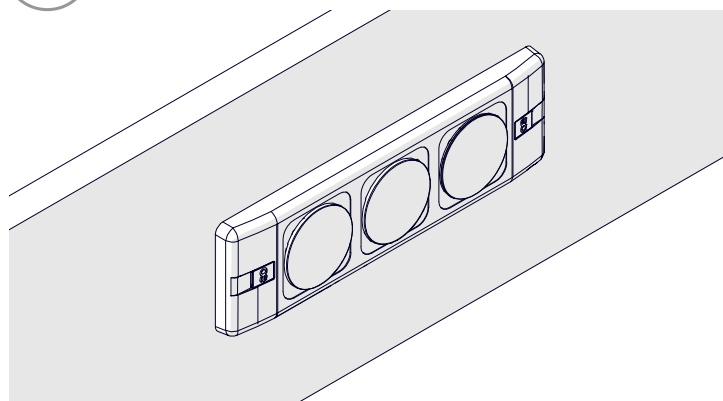


## Thin panel

### 1 Cutouts & depth required

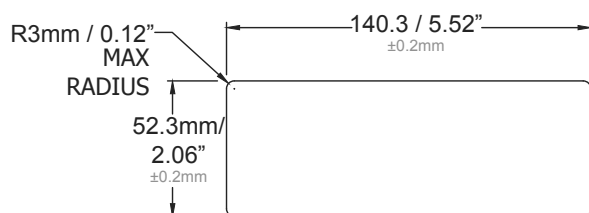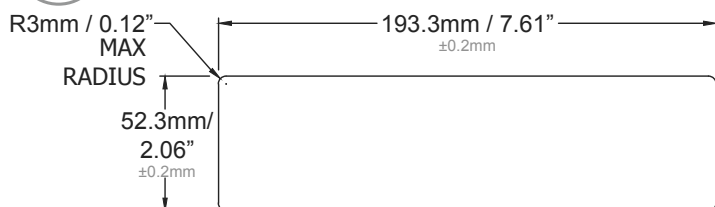


### 2 Max panel thickness 3mm / 0.12" (+/- 0.1mm / 0.004")

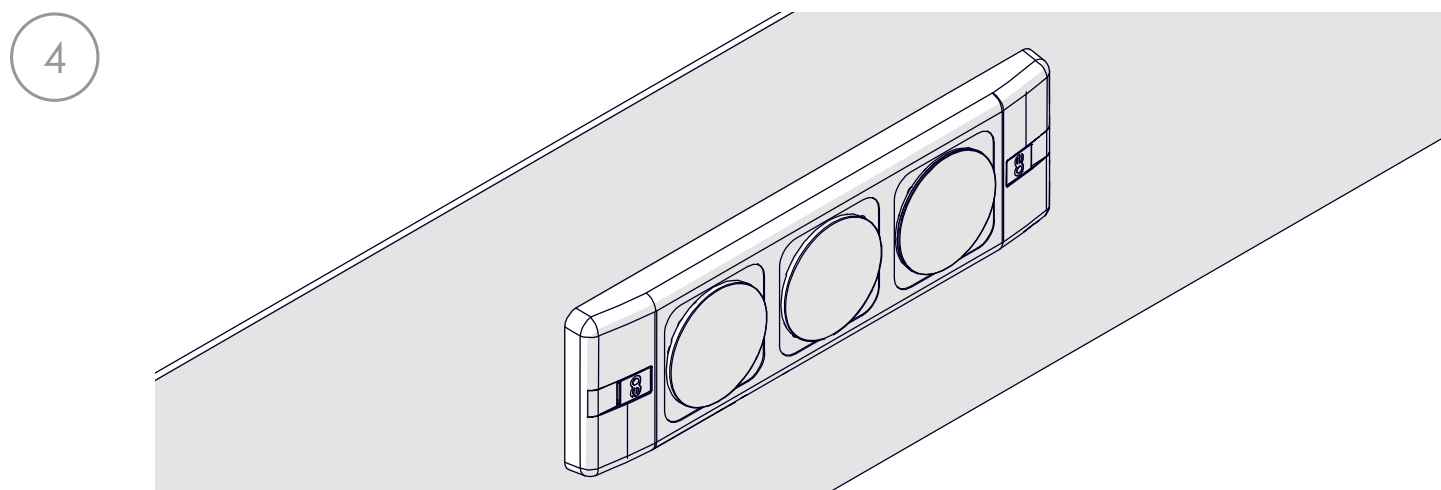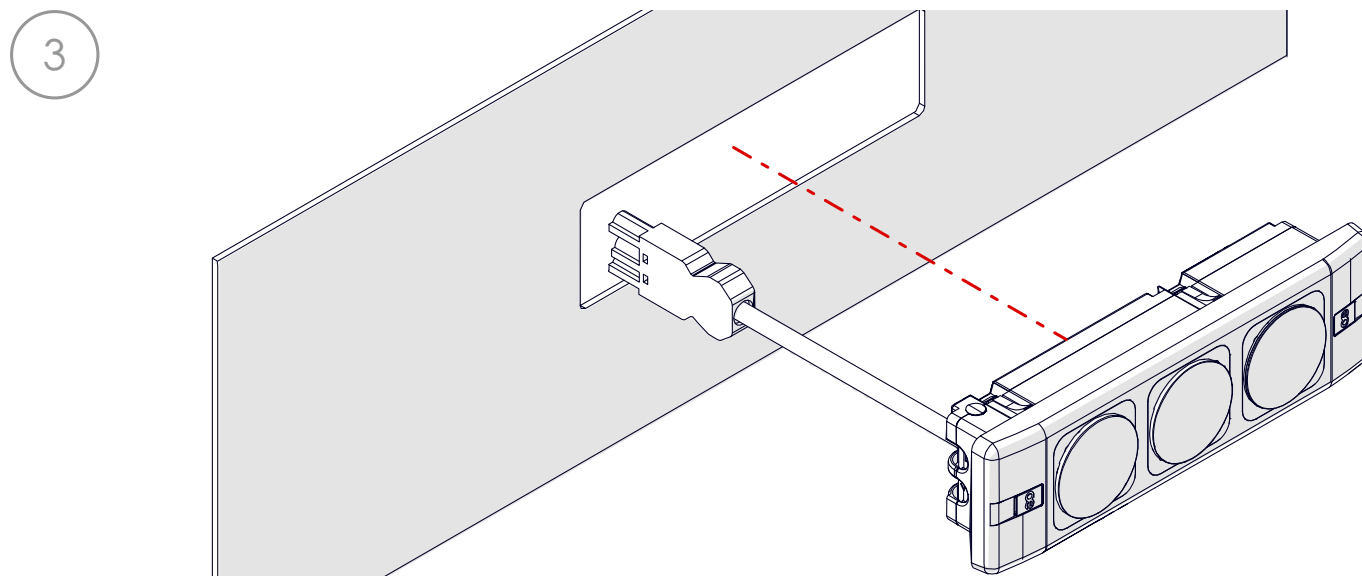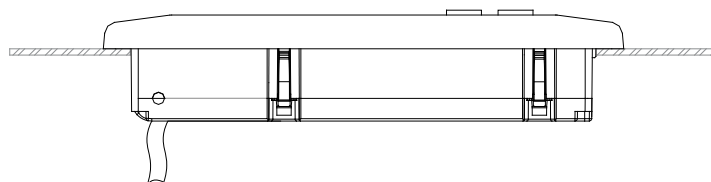


## PUMA installation instructions

### Flush mount


#### 1 Cutouts & screw positions

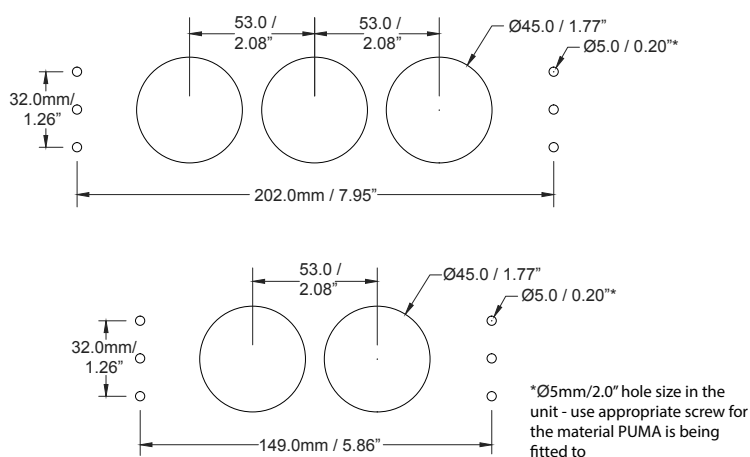


#### 2 Panel thickness must be between 1.5 - 1.6mm / 0.05" - 0.06"

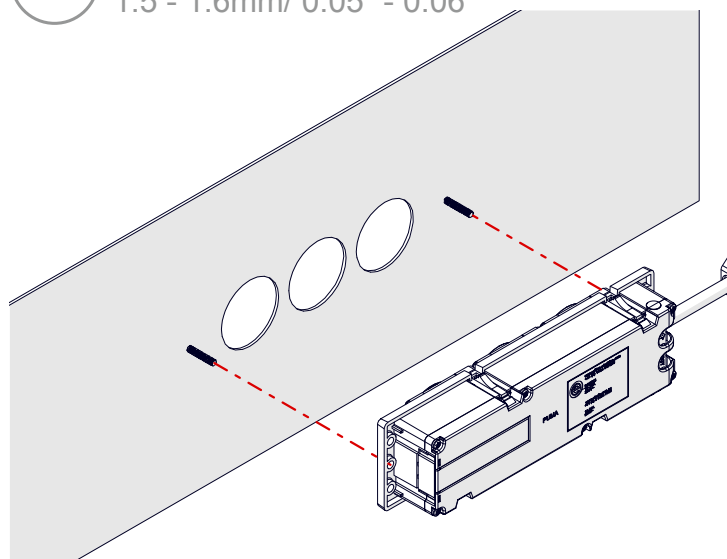


3

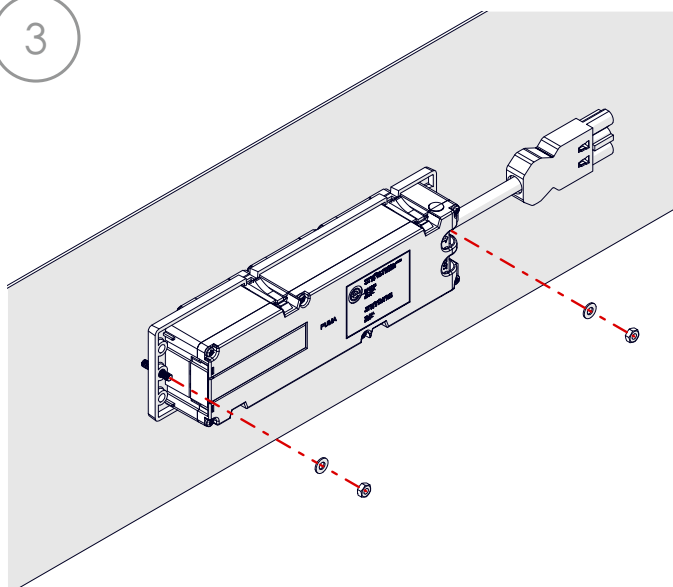


4

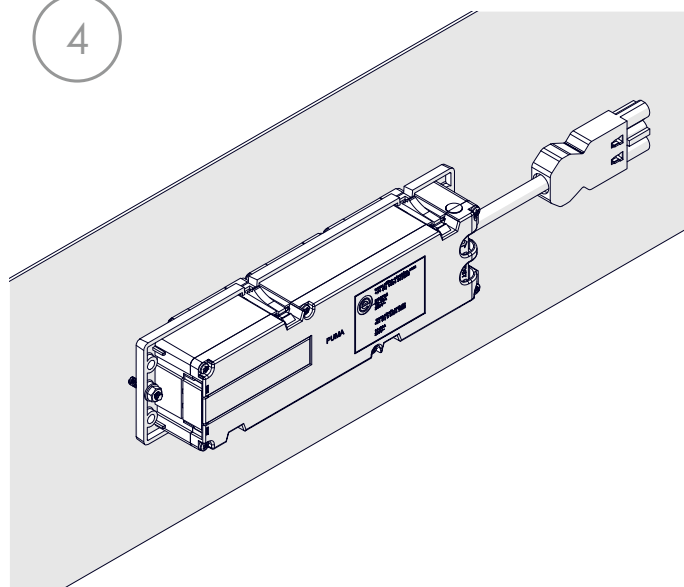

5


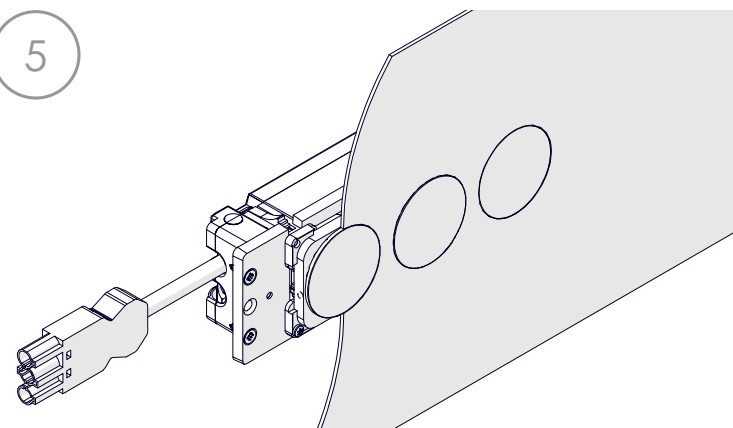


6

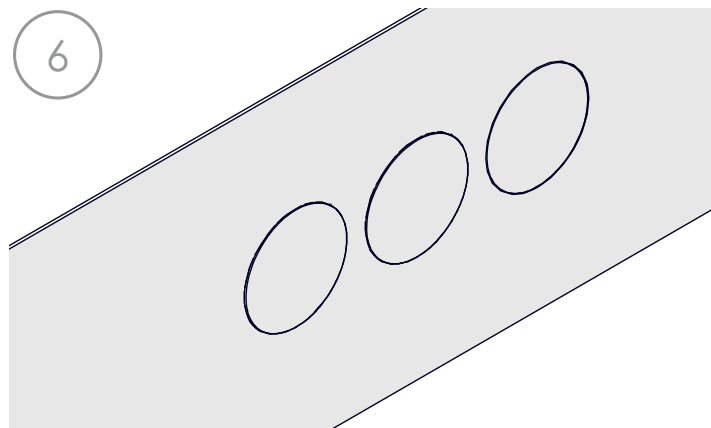


## Shallow cavity


### 1 Cutouts & depth required

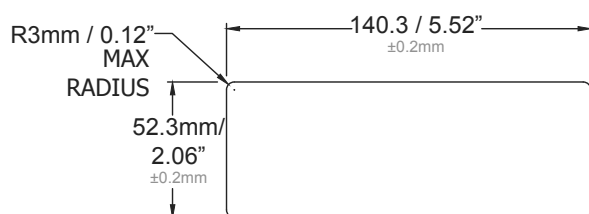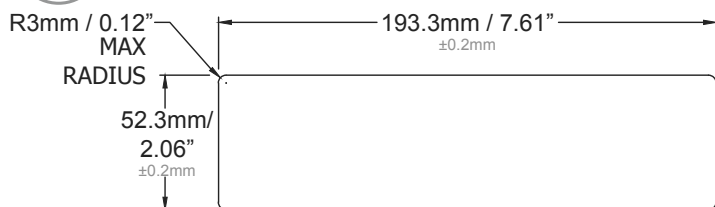

### 2 Slide in the right hand side

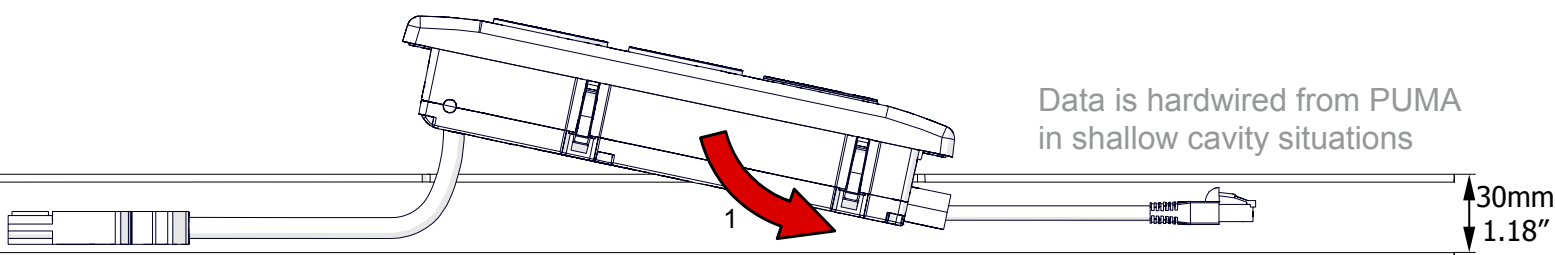

### 3 Press down to snap in place

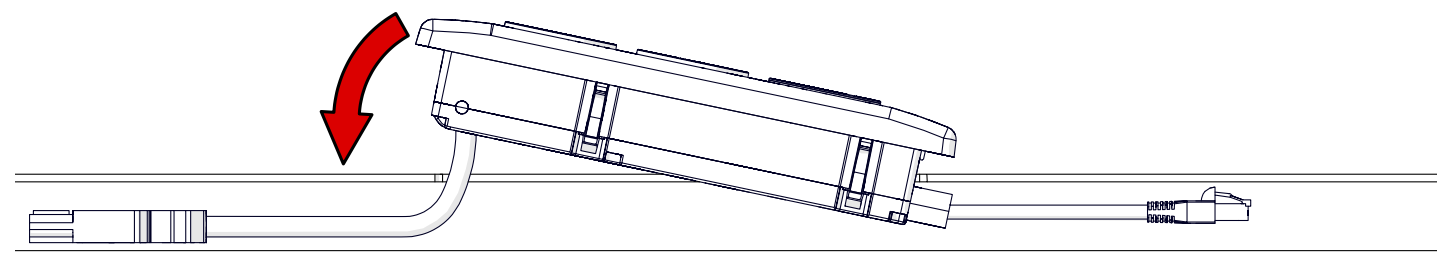

### 4

